



GROUND FLOOR PLAN

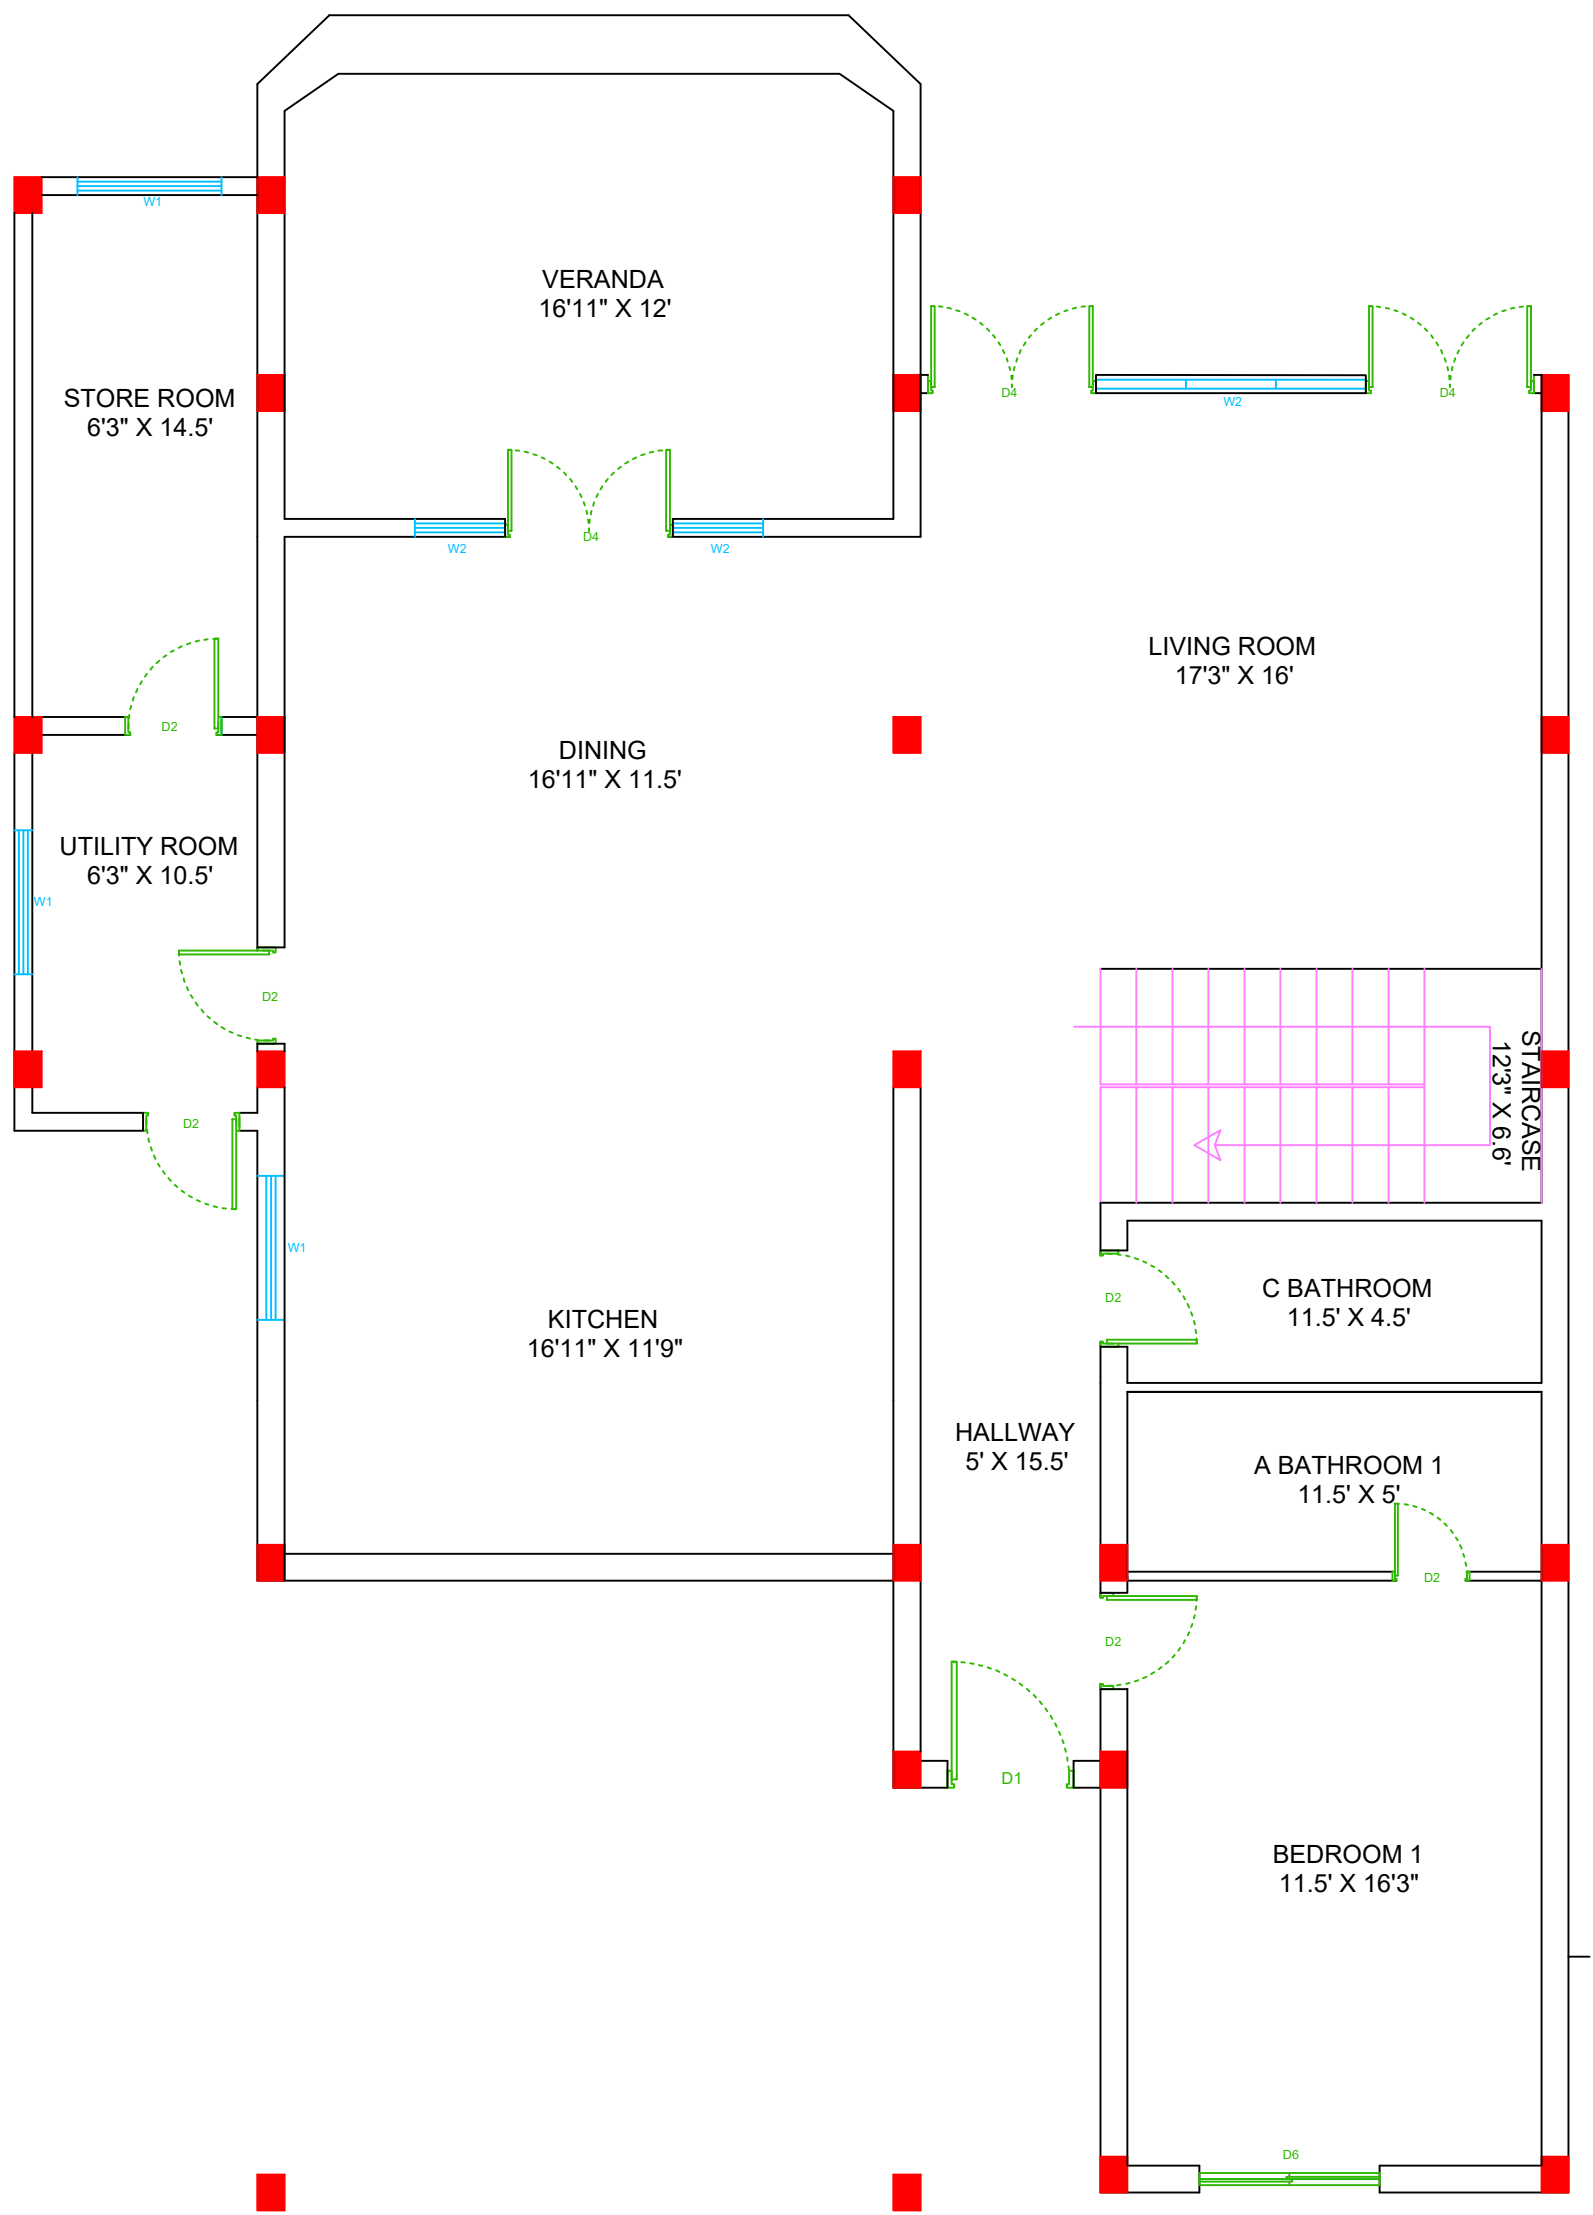


AREA: 1500 Sq ft

FIRST FLOOR PLAN

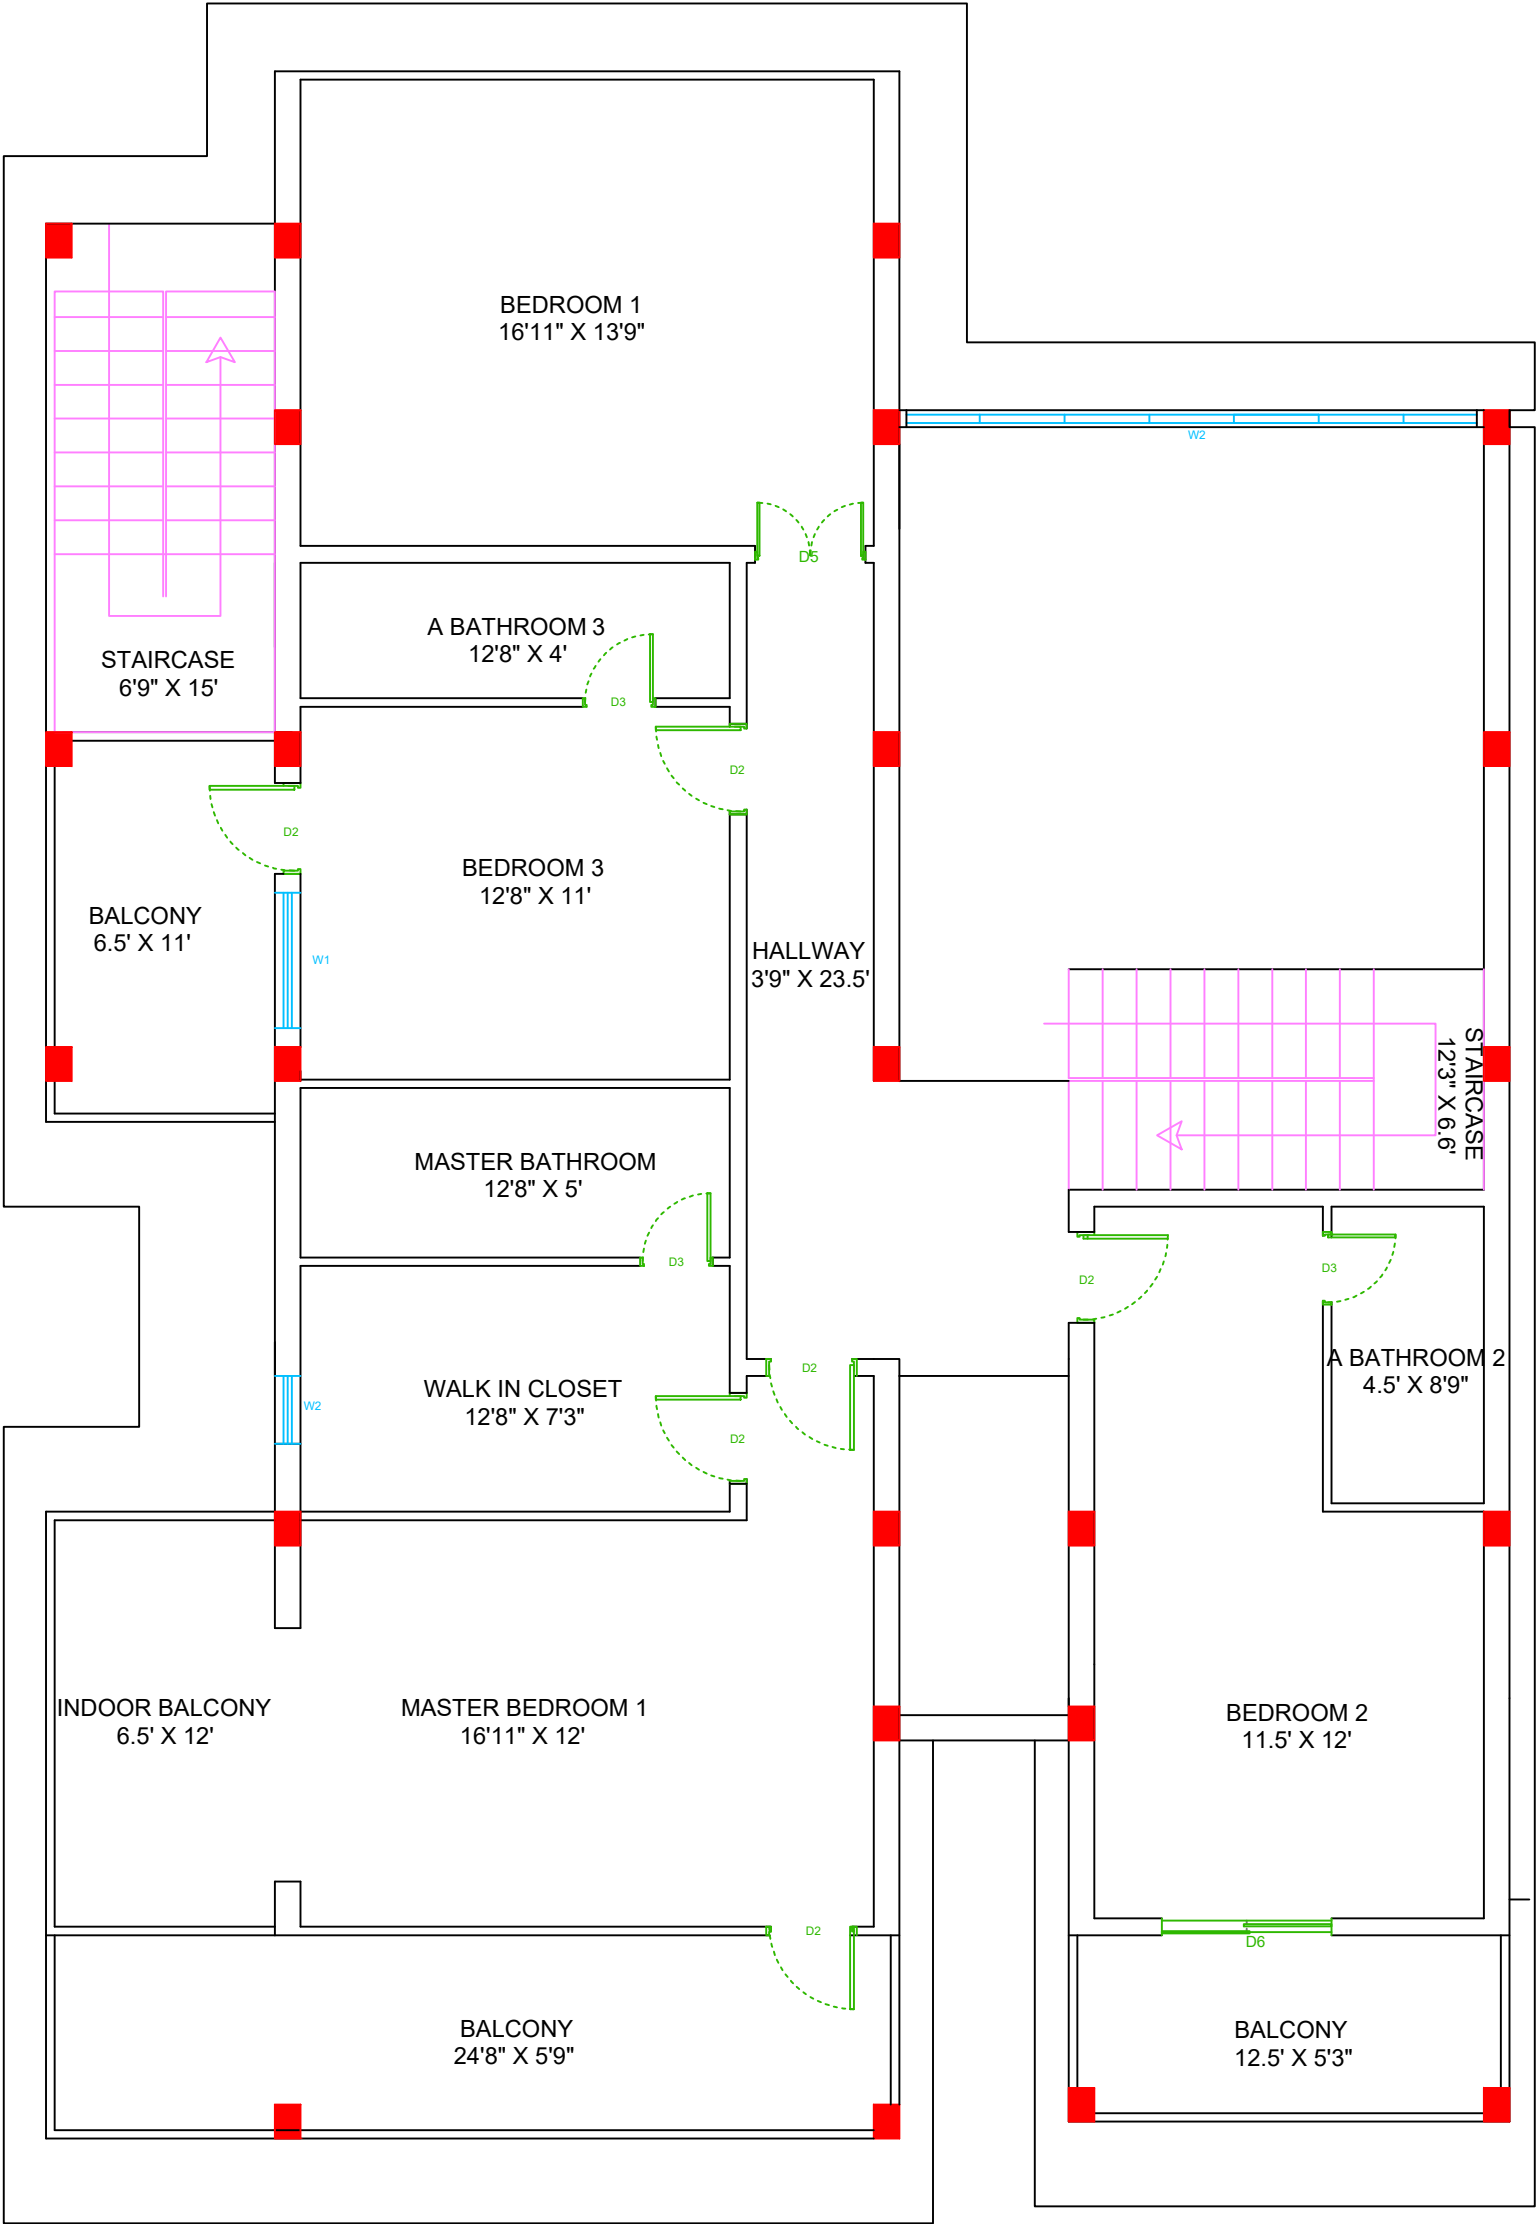


AREA: 1500 Sq ft




GRID LAYOUT PLAN

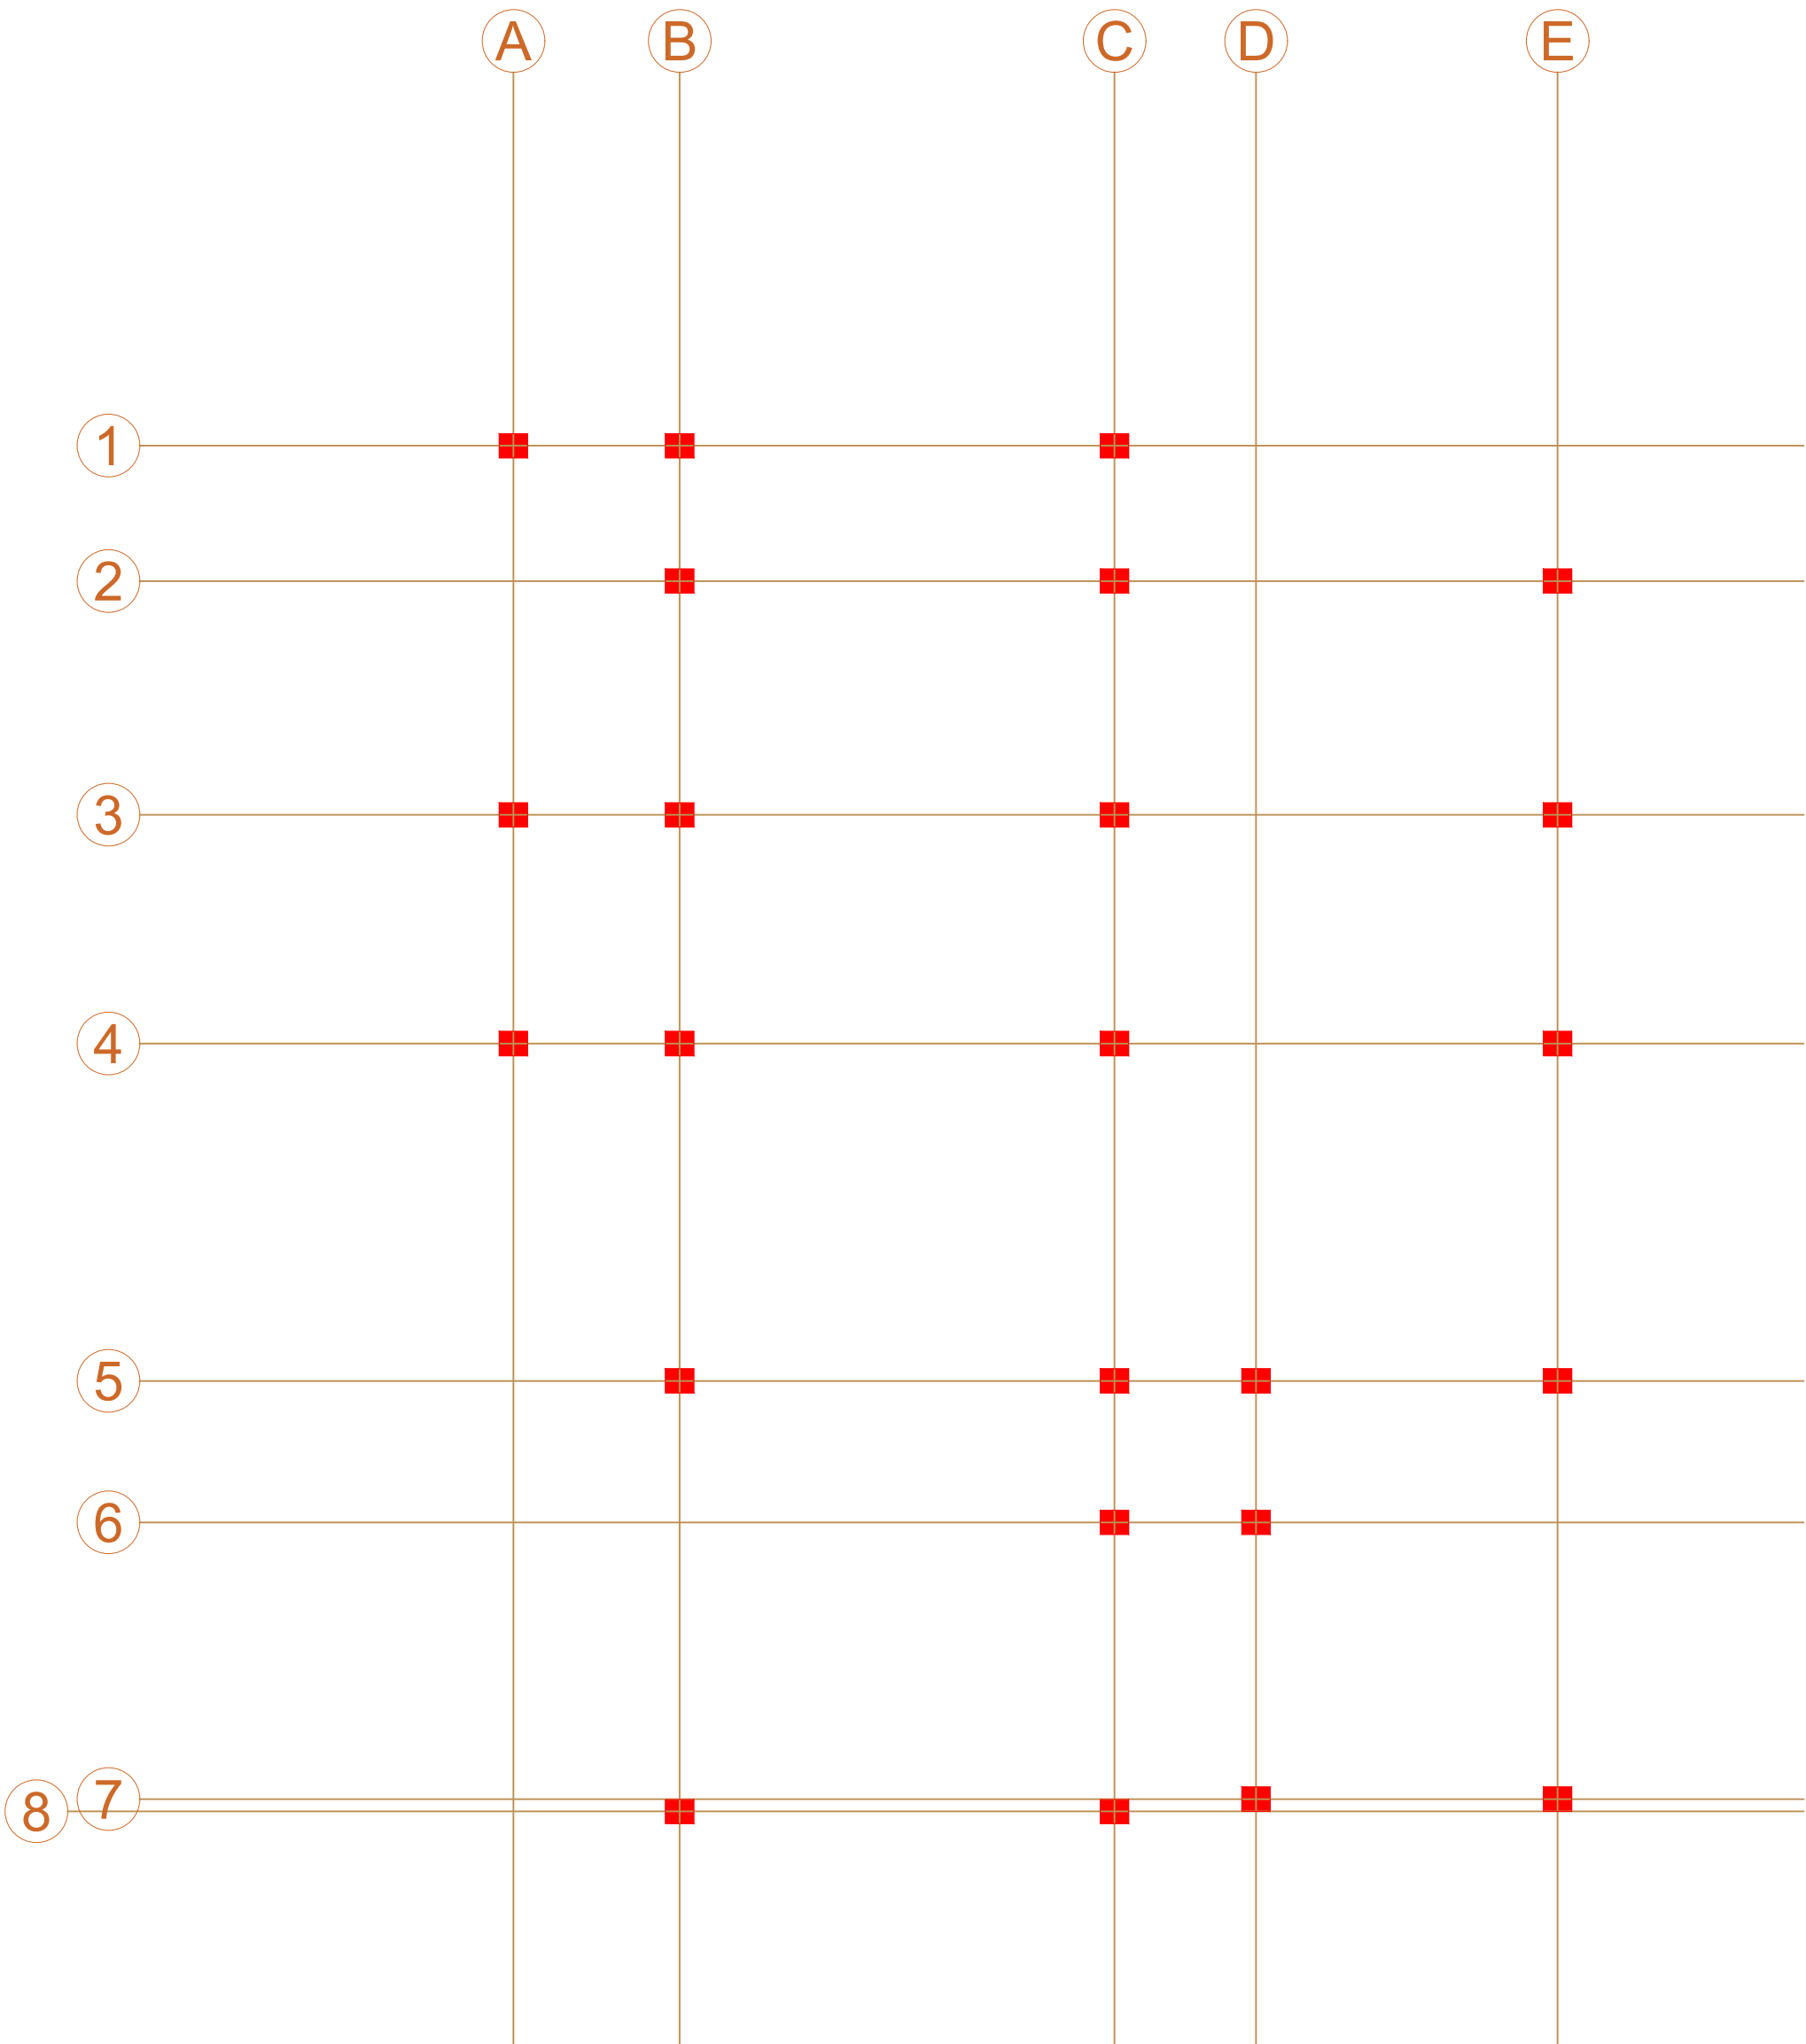

TYPICAL FOUNDATION PLAN


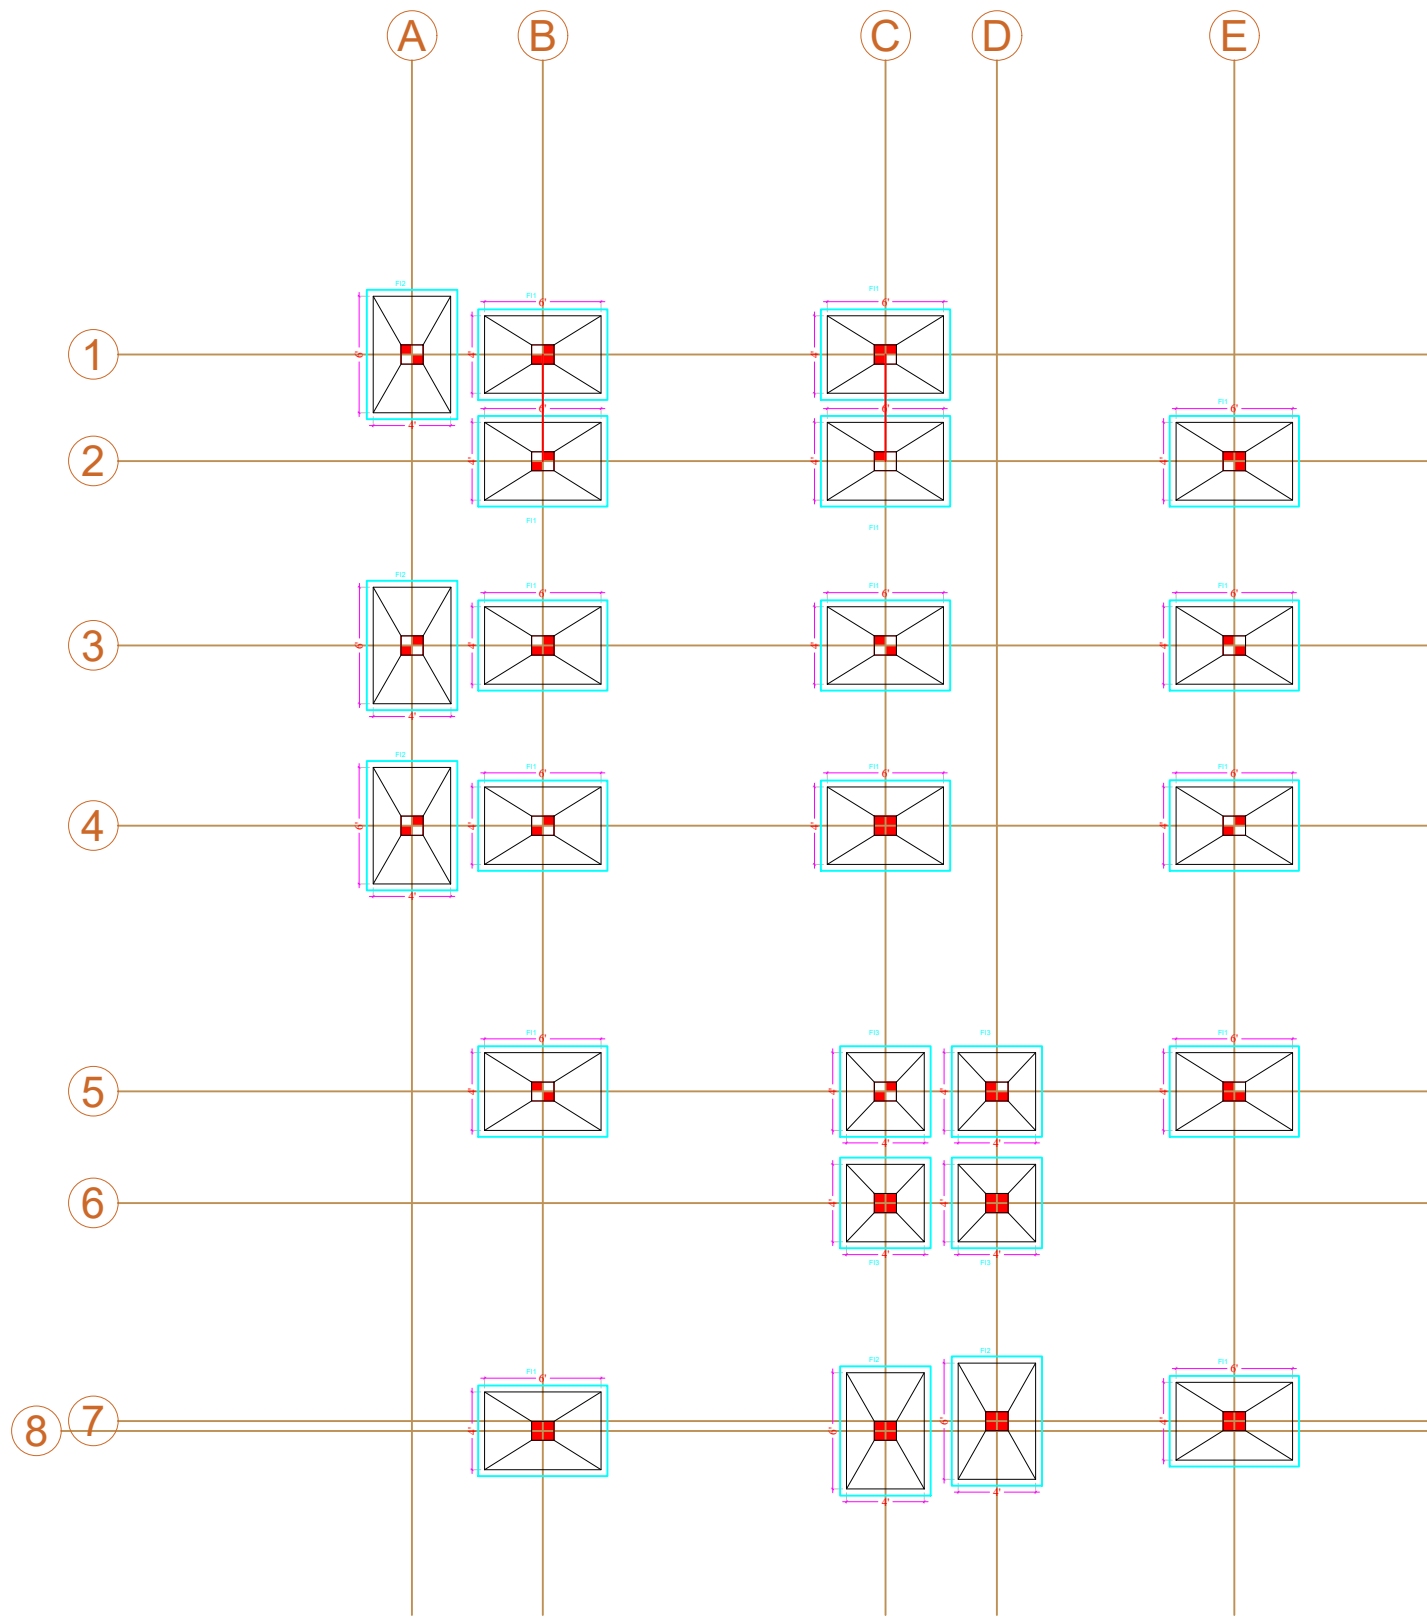


COLUMN / PEDESTAL DIMENSIONS
PER PLAN

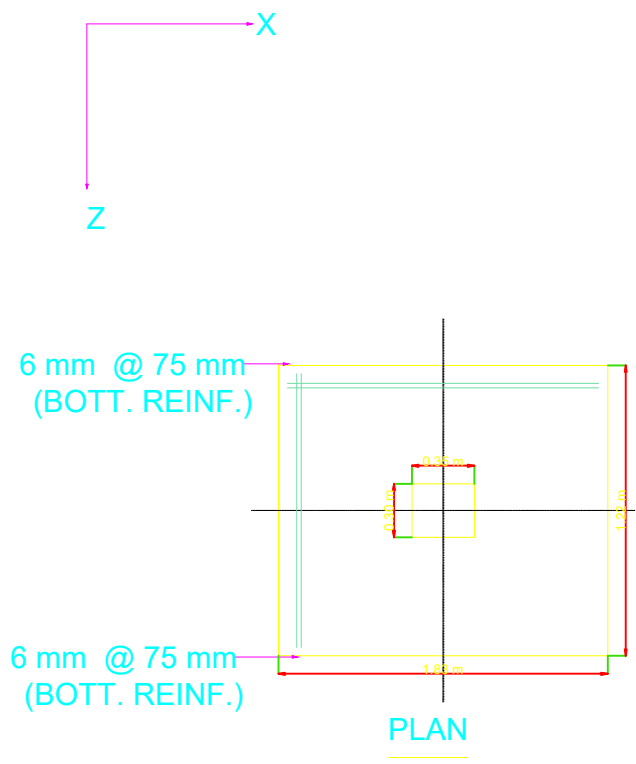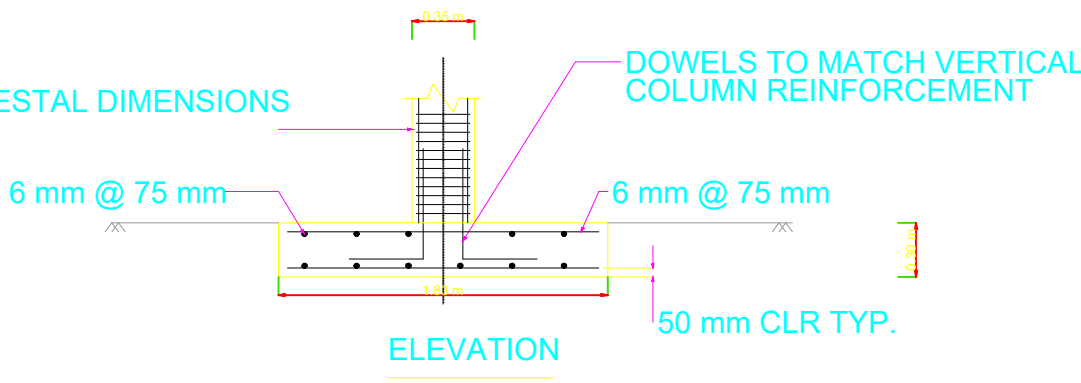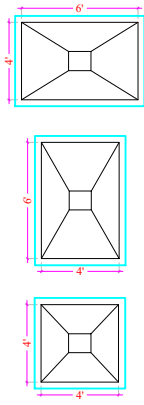

FOOTING SCHEDULE						
S. NO.	FOOTING NO.	SIZE		DEPTH		REINFORCEMENT
		RCC	PCC	D	d	
1	F1	6'0"X4'0"	6'8"X4'8"	24"	12"	12 ϕ @ 6" C/C
2	F2	4'0"X6'0"	4'8"X6'8"	24"	12"	12 ϕ @ 6" C/C
2	F2	4'0"X4'0"	4'8"X4'8"	24"	12"	12 ϕ @ 6" C/C

COLUMN LAYOUT PLAN

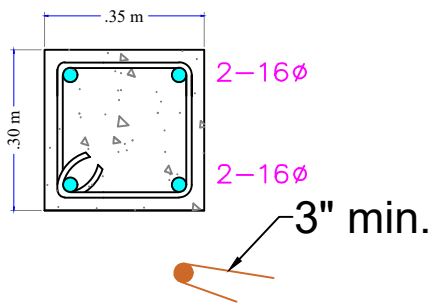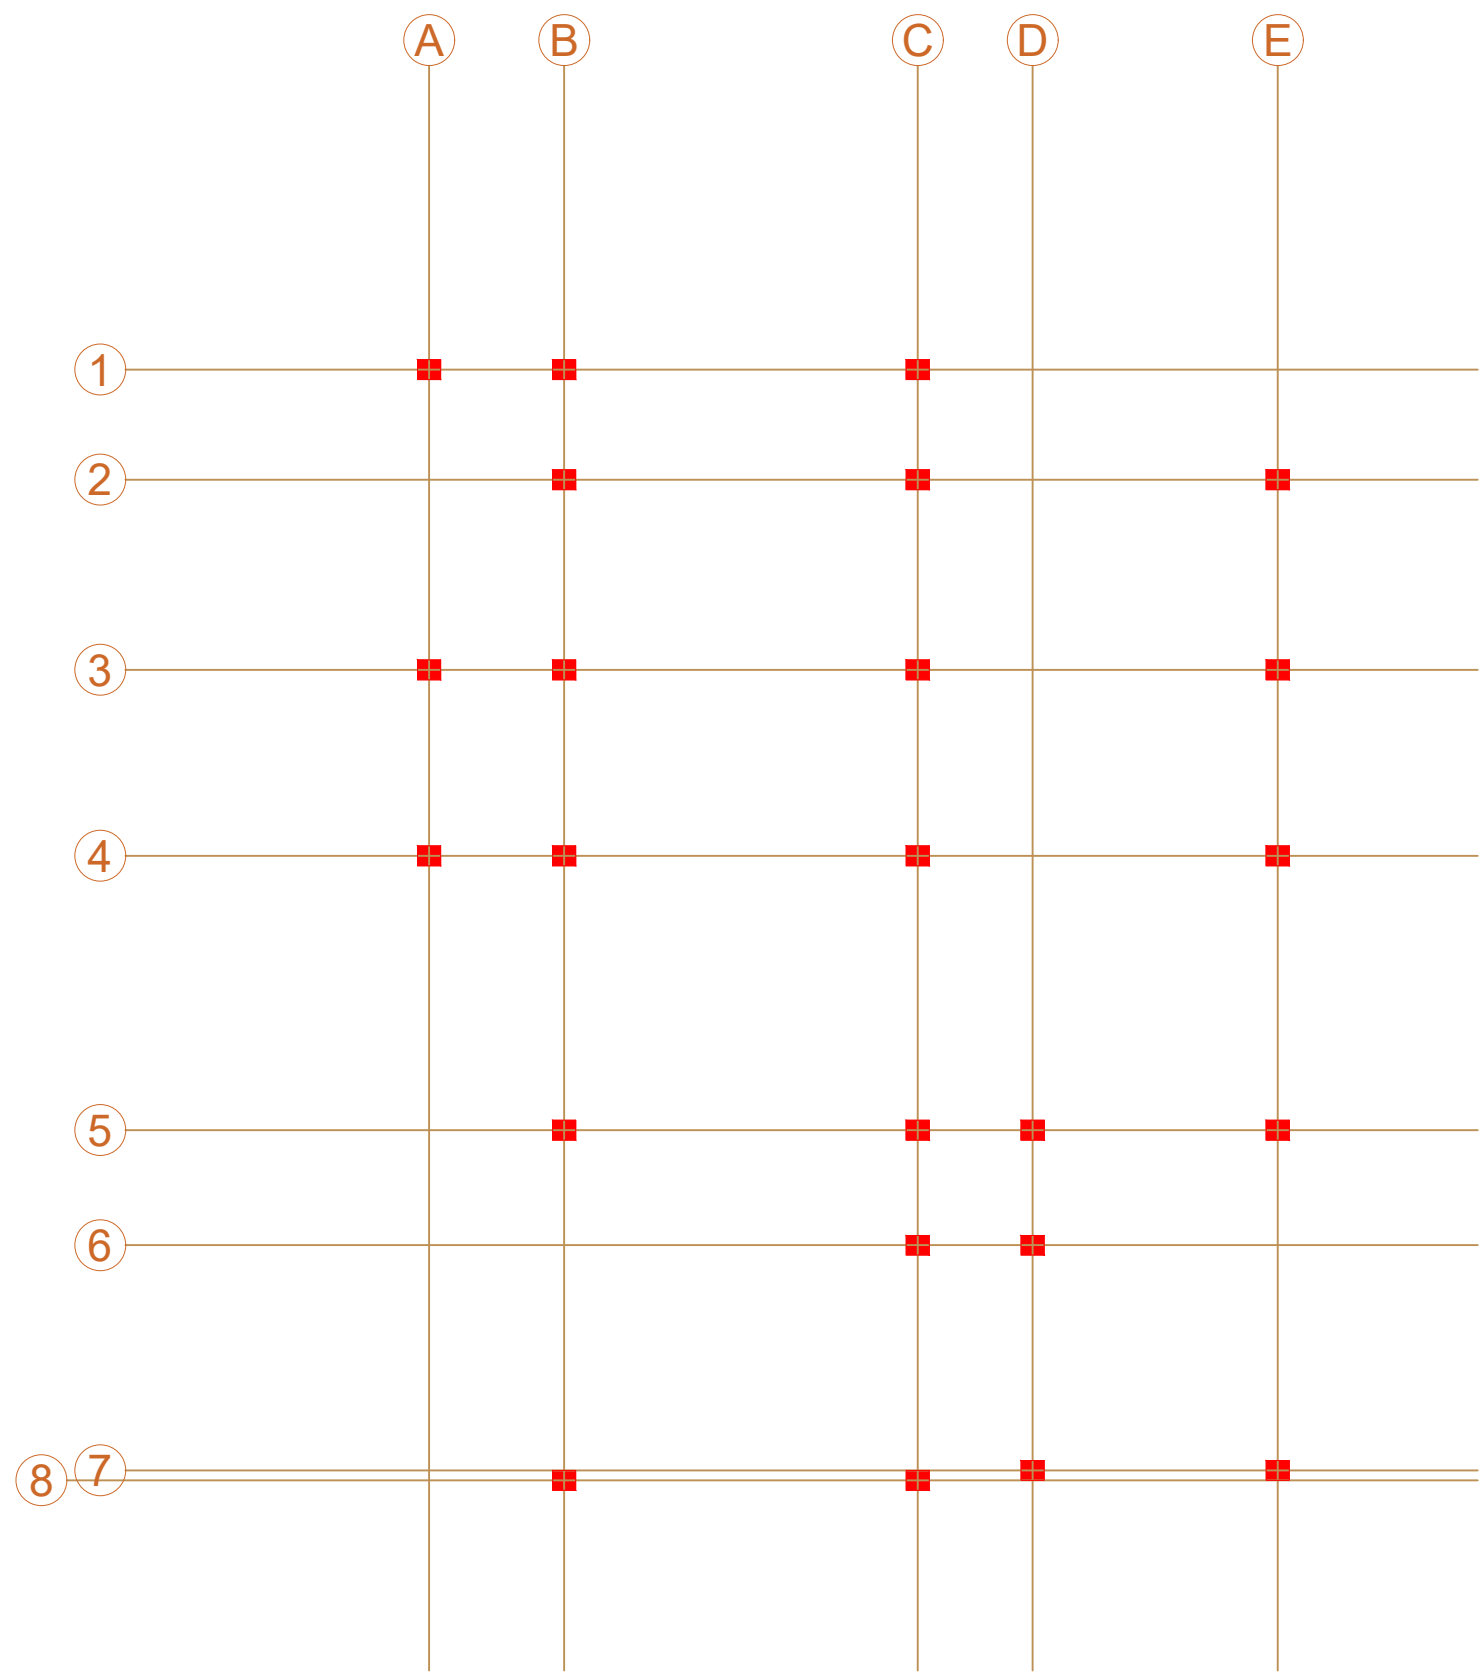


COLUMN DETAILS

S.NO	COLUMN NO.	SIZE	REINFORCEMENT	STIRRUPS	STIRRUPS AT JOINT
1	C4	.35 m X .30 m	4-16Ø	8 MM #6"C/C	8 MM #4"C/C

PLINTH BEAM LAYOUT PLAN



PLINTH BEAM LAYOUT

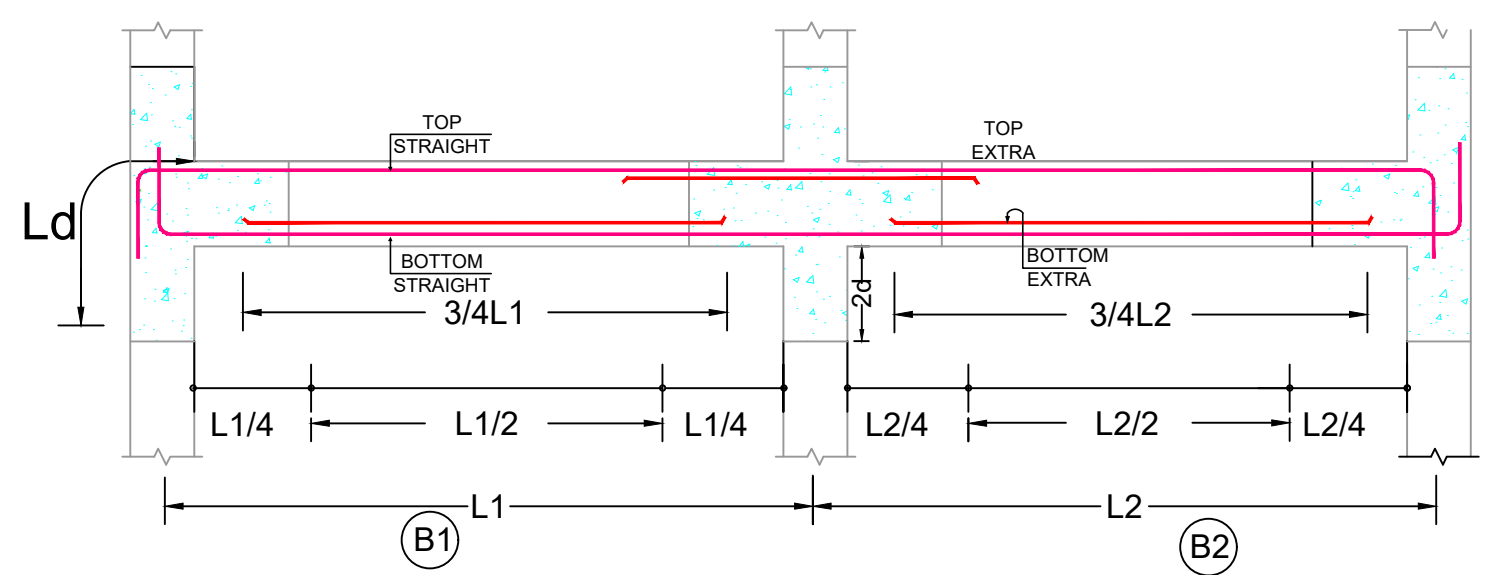



TYPICAL ARRANGEMENT OF BEAM REINFORCEMENT

SHEAR REIN. UNLESS OTHERWISE STATED
I.) SHEAR REIN. FOR ALL THE BEAMS SHALL BE 8mm @ 4" C/C IN L/4
II.) SHEAR REIN. FOR ALL THE BEAMS SHALL BE 8mm @ 6" C/C IN L/2
DUCTILE DETAILING FOR COLUMN AND BEAM JUNCTION IS SHOWN IN HATCHED AREA
SHEAR REINFORCEMENT IN HATCHED AREA @ $d/4$ mm c/c, (MINIMUM. 4" C/C)
WHERE 'd' is the Effective Depth of the Beam.

NOTE :-
THE SHEAR REIN. IN L/4 SHOULD BE AS I.) OR $d/4$ mm C/C
WHICH EVER IS LESS FOR REST OF THE BEAM
PROVIDE SHEAR REIN. AS IN II.)

SCHEDULE OF PLINTH BEAM						
NAME	SIZE	REINFORCEMENT: MAIN BAR		EXTRA REINFORCEMENT		SHEAR REINFORCEMENT AT JOINTS
		TOP	BOTTOM	TOP	BOTTOM	
PB1	.25 m X.30 m	2-16Ø	2-16Ø	1-16Ø	1-16Ø	10Ø @ 100 C/C


PLINTH SLAB LAYOUT PLAN

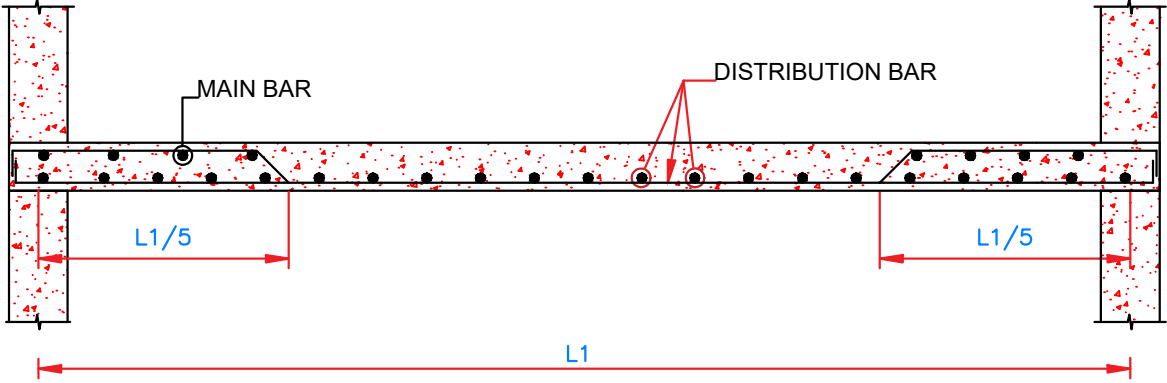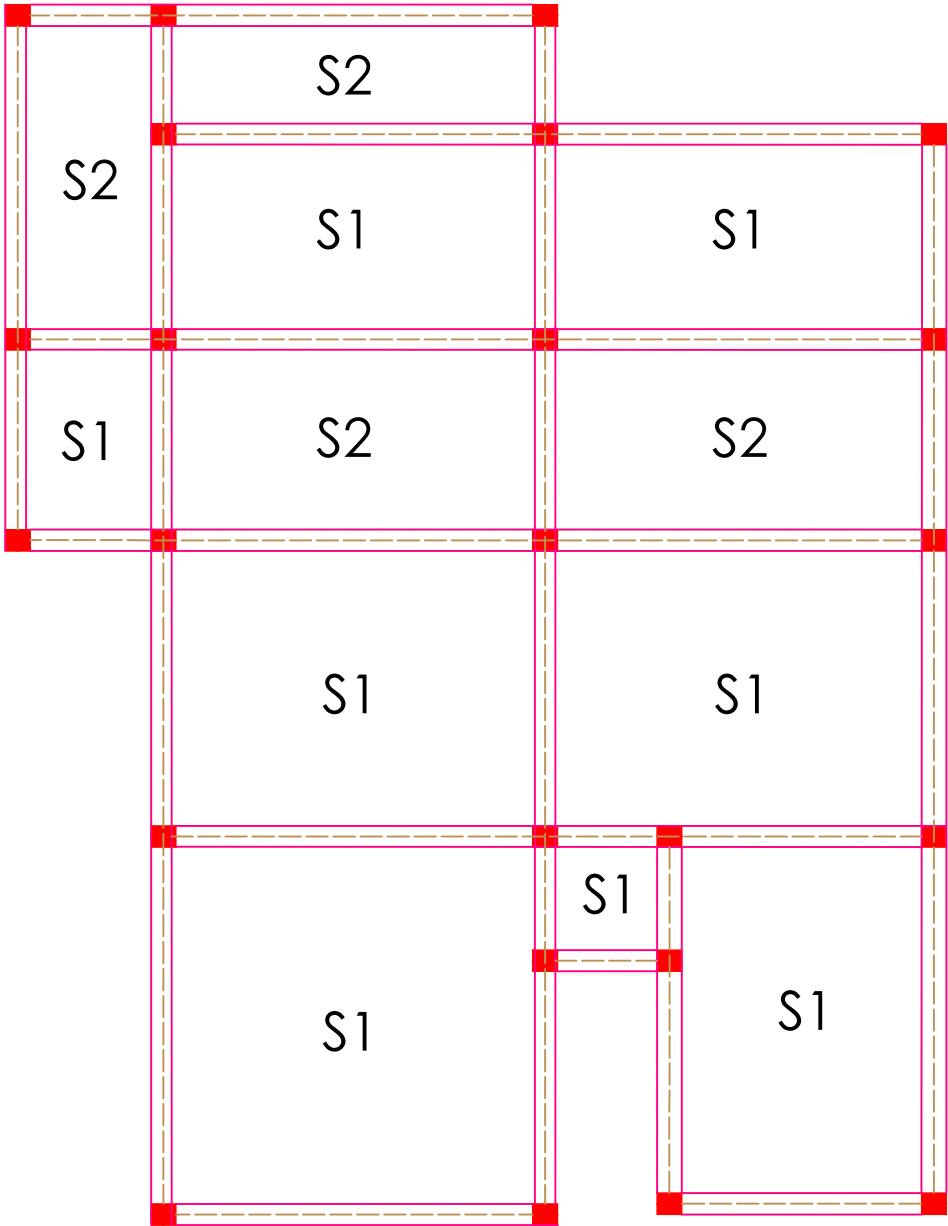


TYPICAL SECTION
SHOWING SLAB REINFORCEMENT

SCHEDULE OF PLINTH SLAB					
NO.	SLAB	SLAB TYPE	THICKNESS (mm)	BOTTOM REINFORCEMENT	
				IN SHORTER	IN LONGER
1.	S1	TWO WAY	150	8ø@101C/C	8ø@101C/C
2.	S2	ONE WAY	150	8ø@204C/C	8ø@204C/C


FLOOR BEAM LAYOUT PLAN

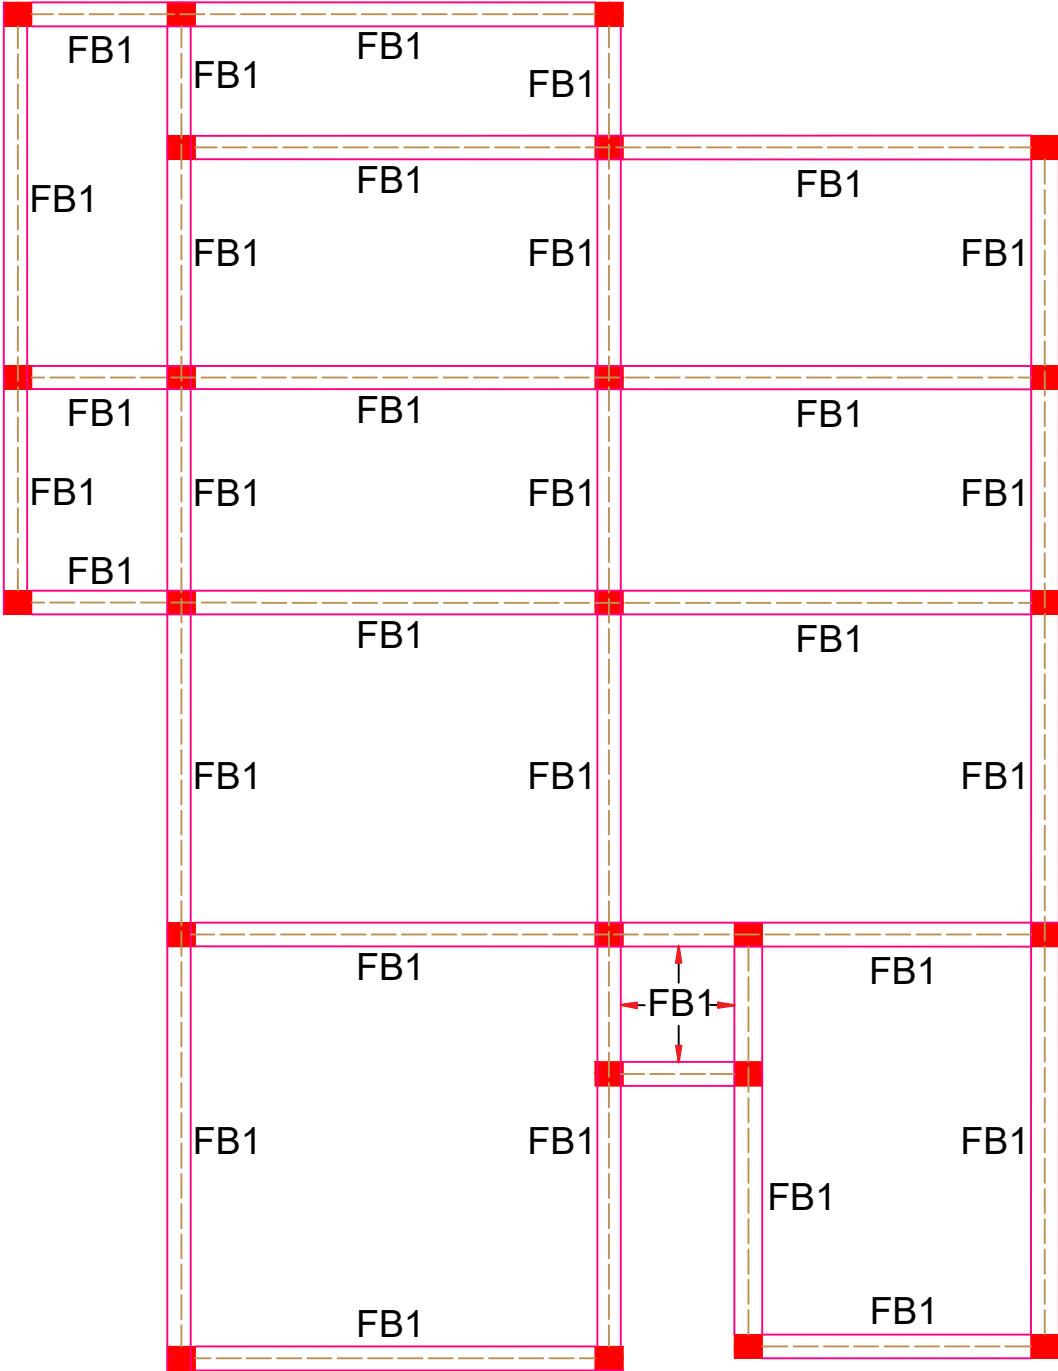

FLOOR BEAM LAYOUT


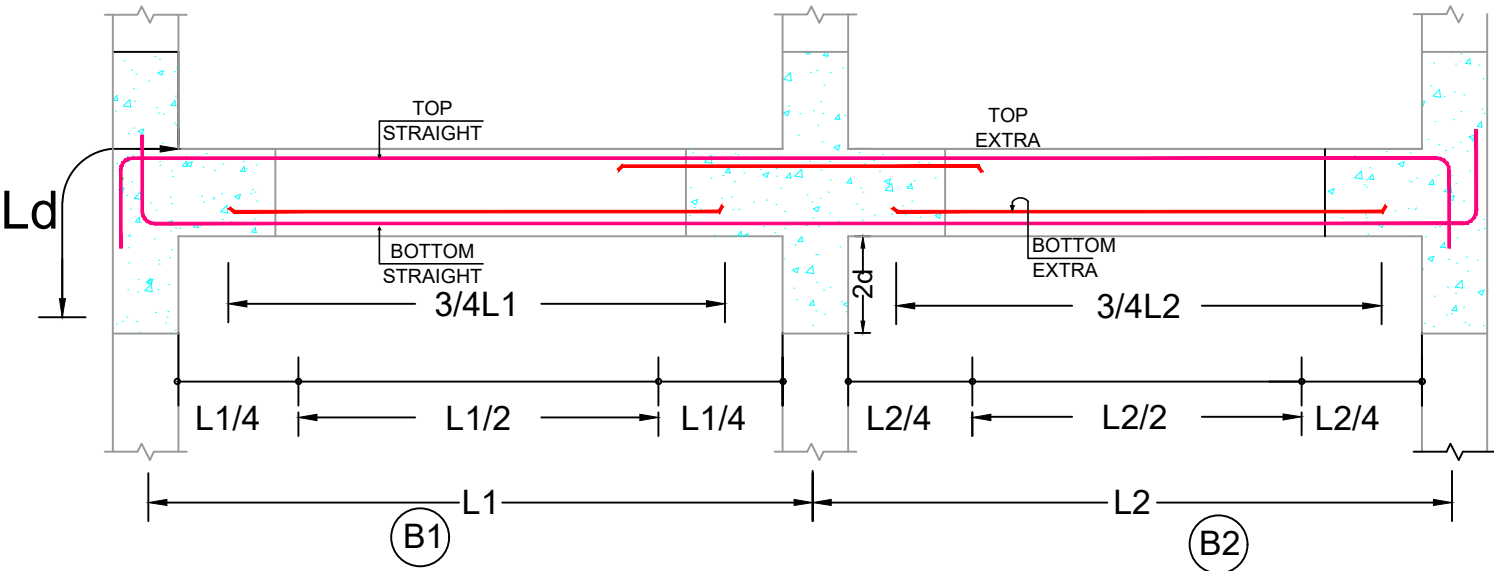


TYPICAL ARRANGEMENT OF BEAM REINFORCEMENT

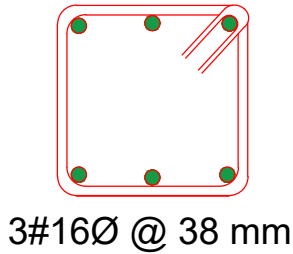

SCHEDULE OF FLOOR BEAM(DOUBLE STOREY)				
NAME	SIZE (MM)	REINFORCEMENT		STIRRUPS
		TOP	BOTTOM	
FB1	250X300	16Ø - 3nos	16Ø - 3nos	8 MM @150 c/c




FLOOR SLAB LAYOUT PLAN

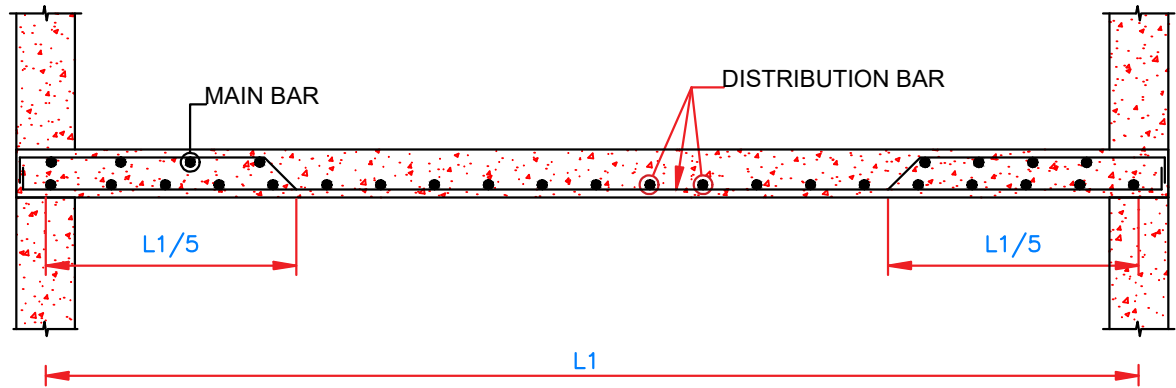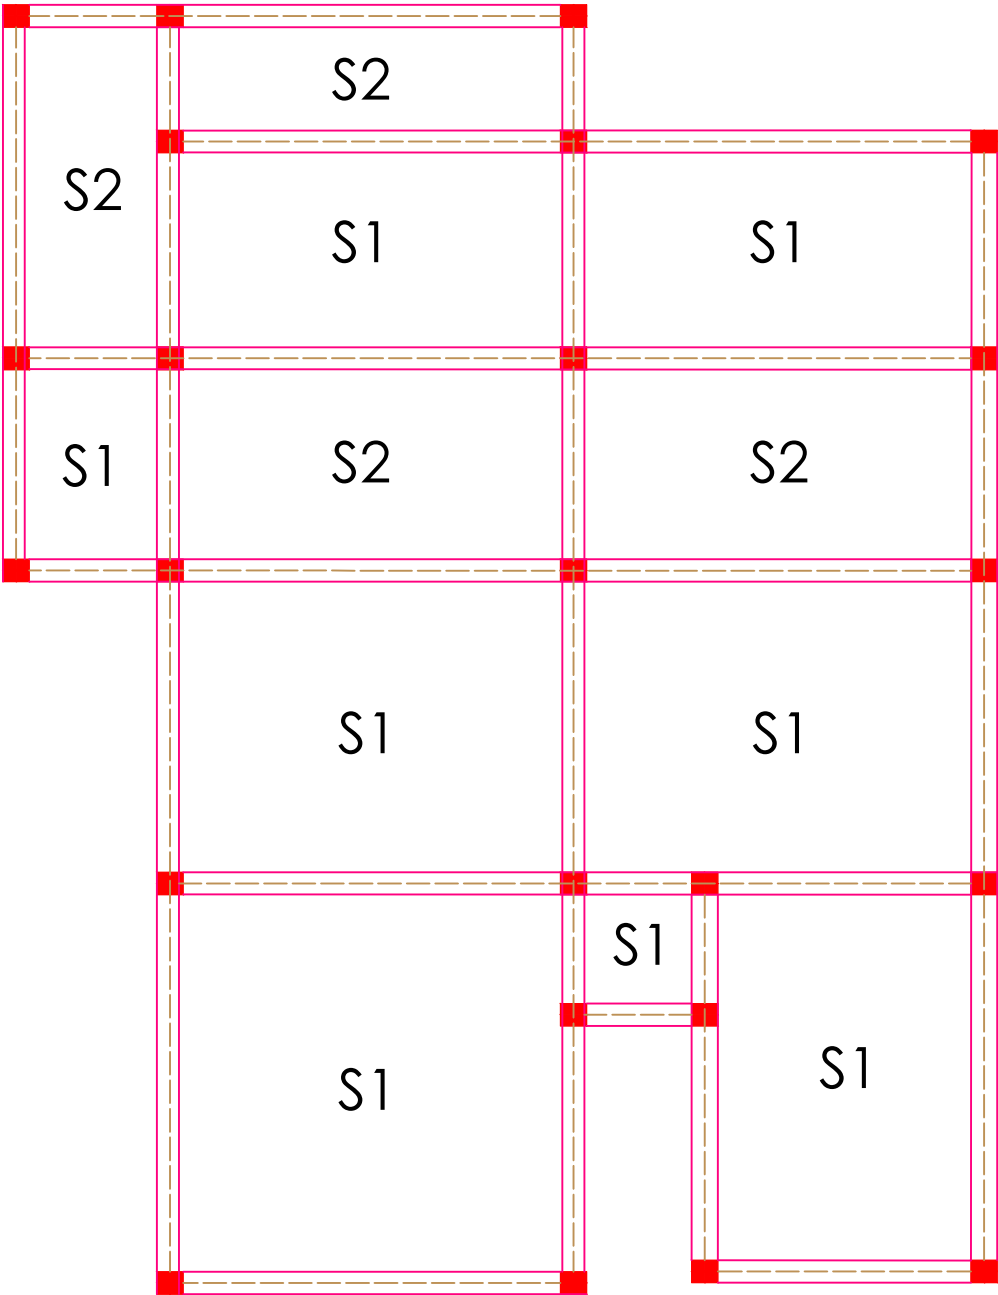

TYPICAL SECTION
SHOWING SLAB REINFORCEMENT



SCHEDULE OF PLINTH SLAB					
NO.	SLAB	SLAB TYPE	THICKNESS (mm)	BOTTOM REINFORCEMENT	
				IN SHORTER	IN LONGER
1.	S1	TWO WAY	150	8 ϕ @101C/C	8 ϕ @101C/C
2.	S2	ONE WAY	150	8 ϕ @204C/C	8 ϕ @204C/C

ROOF BEAM LAYOUT PLAN

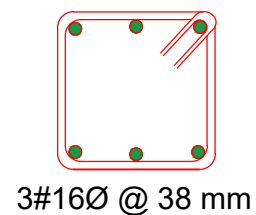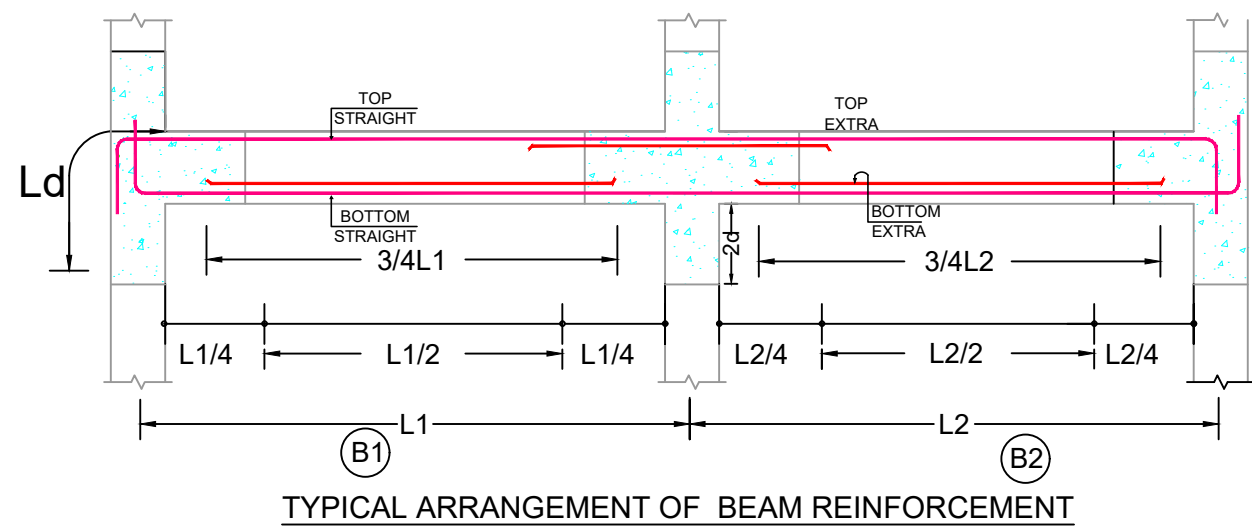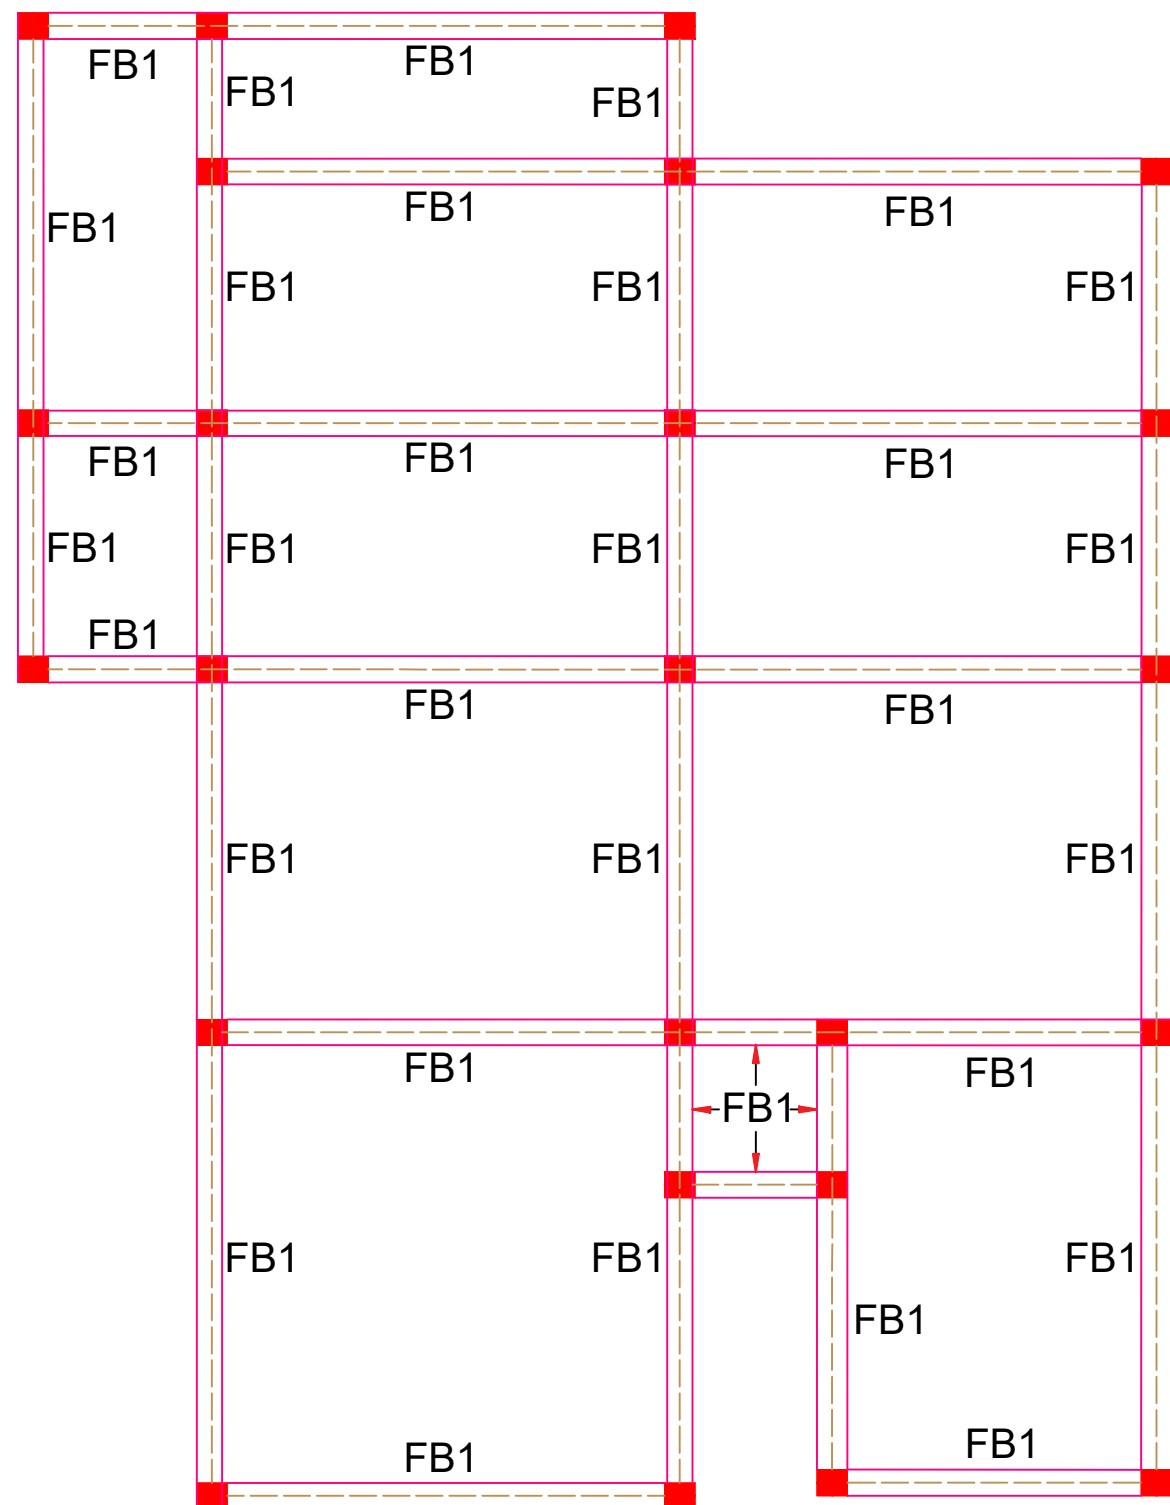

SCHEDULE OF FLOOR BEAM(DOUBLE STOREY)				
NAME	SIZE (MM)	REINFORCEMENT		STIRRUPS
		TOP	BOTTOM	
FB1	250X300	16Ø - 3nos	16Ø - 3nos	8 MM @150 c/c


ROOF SLAB LAYOUT PLAN

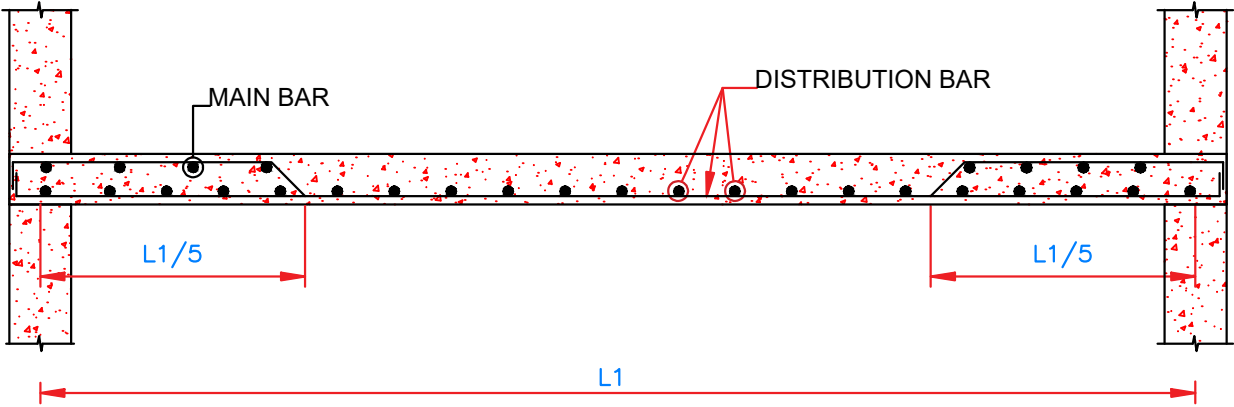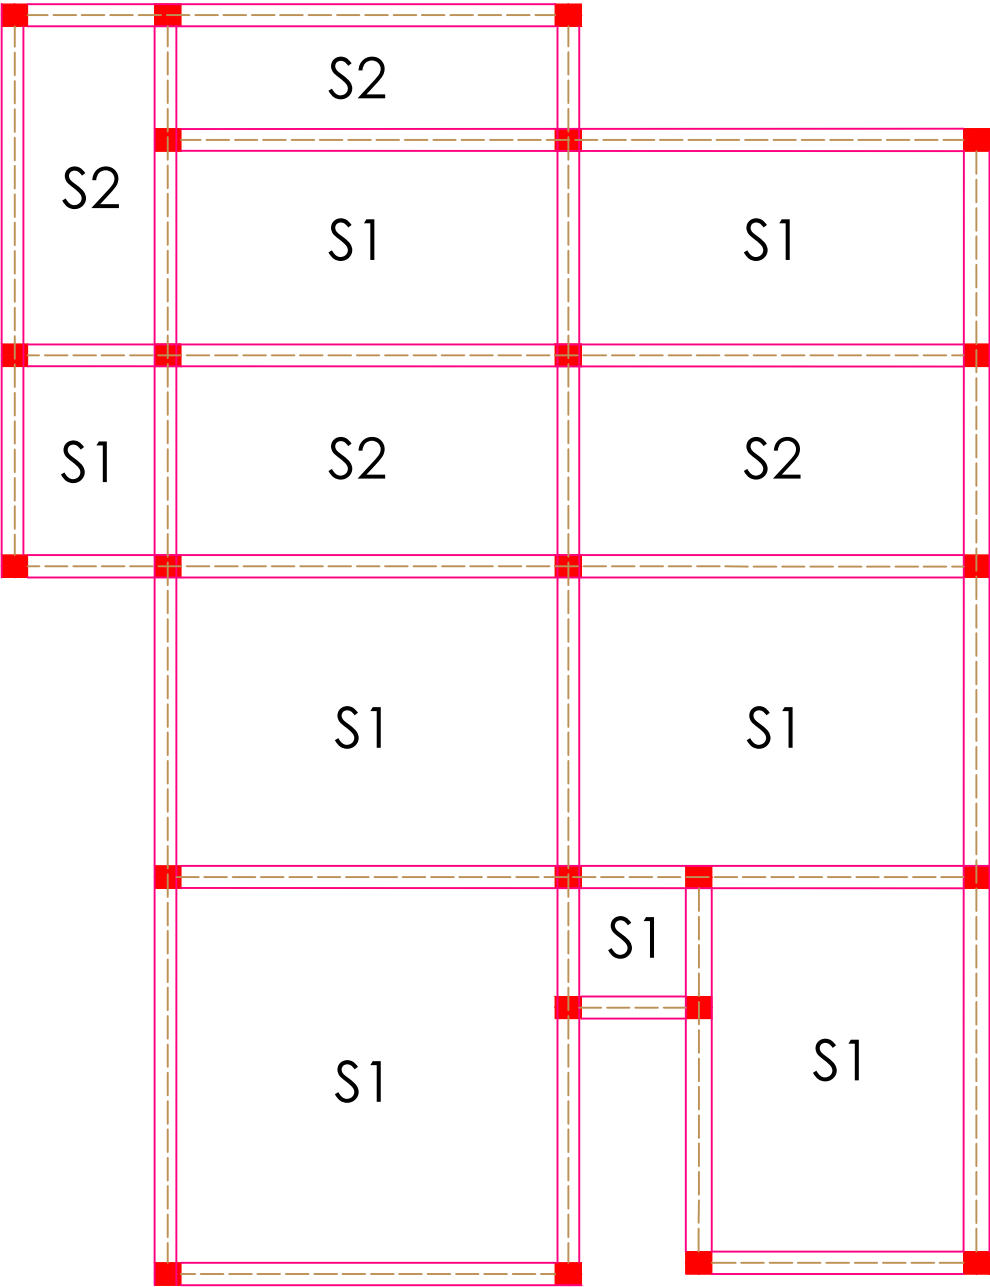

TYPICAL SECTION
SHOWING SLAB REINFORCEMENT


SCHEDULE OF PLINTH SLAB					
NO.	SLAB	SLAB TYPE	THICKNESS (mm)	BOTTOM REINFORCEMENT	
				IN SHORTER	IN LONGER
1.	S1	TWO WAY	150	8ø@101C/C	8ø@101C/C
2.	S2	ONE WAY	150	8ø@204C/C	8ø@204C/C

TYPICAL STAIRCASE LAYOUT

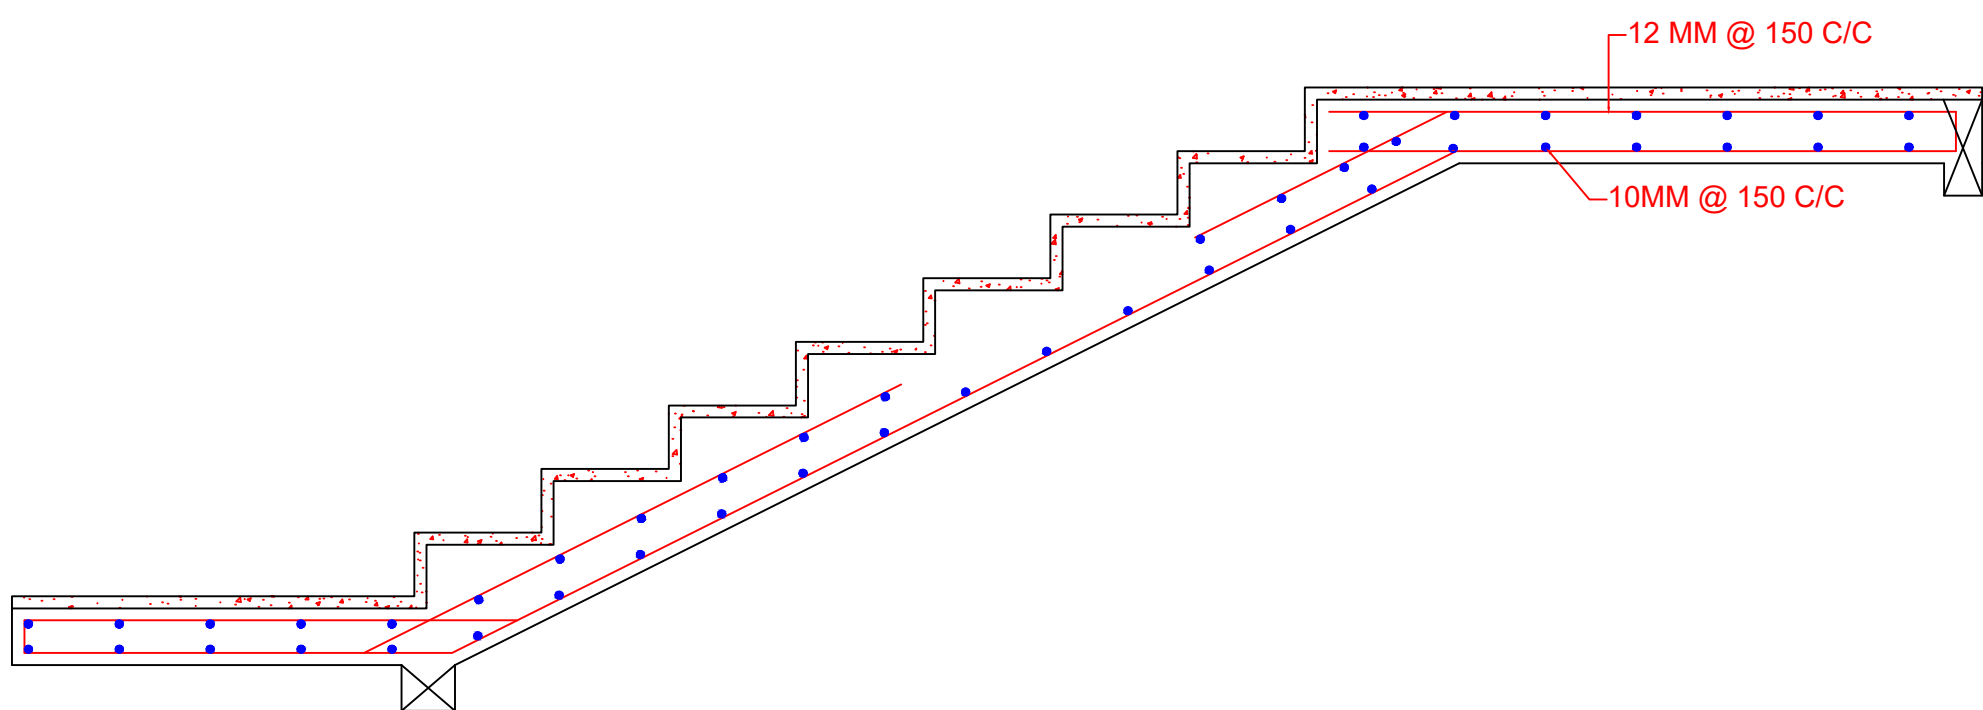


STAIRCASE SCHEDULE					
S.NO	SIZE		SLAB THICKNESS	REINFORCEMENT	
	TREAD	RISER		LONG	SHORT
1	300 MM	150 MM	150MM	10MM @125 c/c	8MM @125 c/c

FIRST FLOOR FURNITURE PLAN

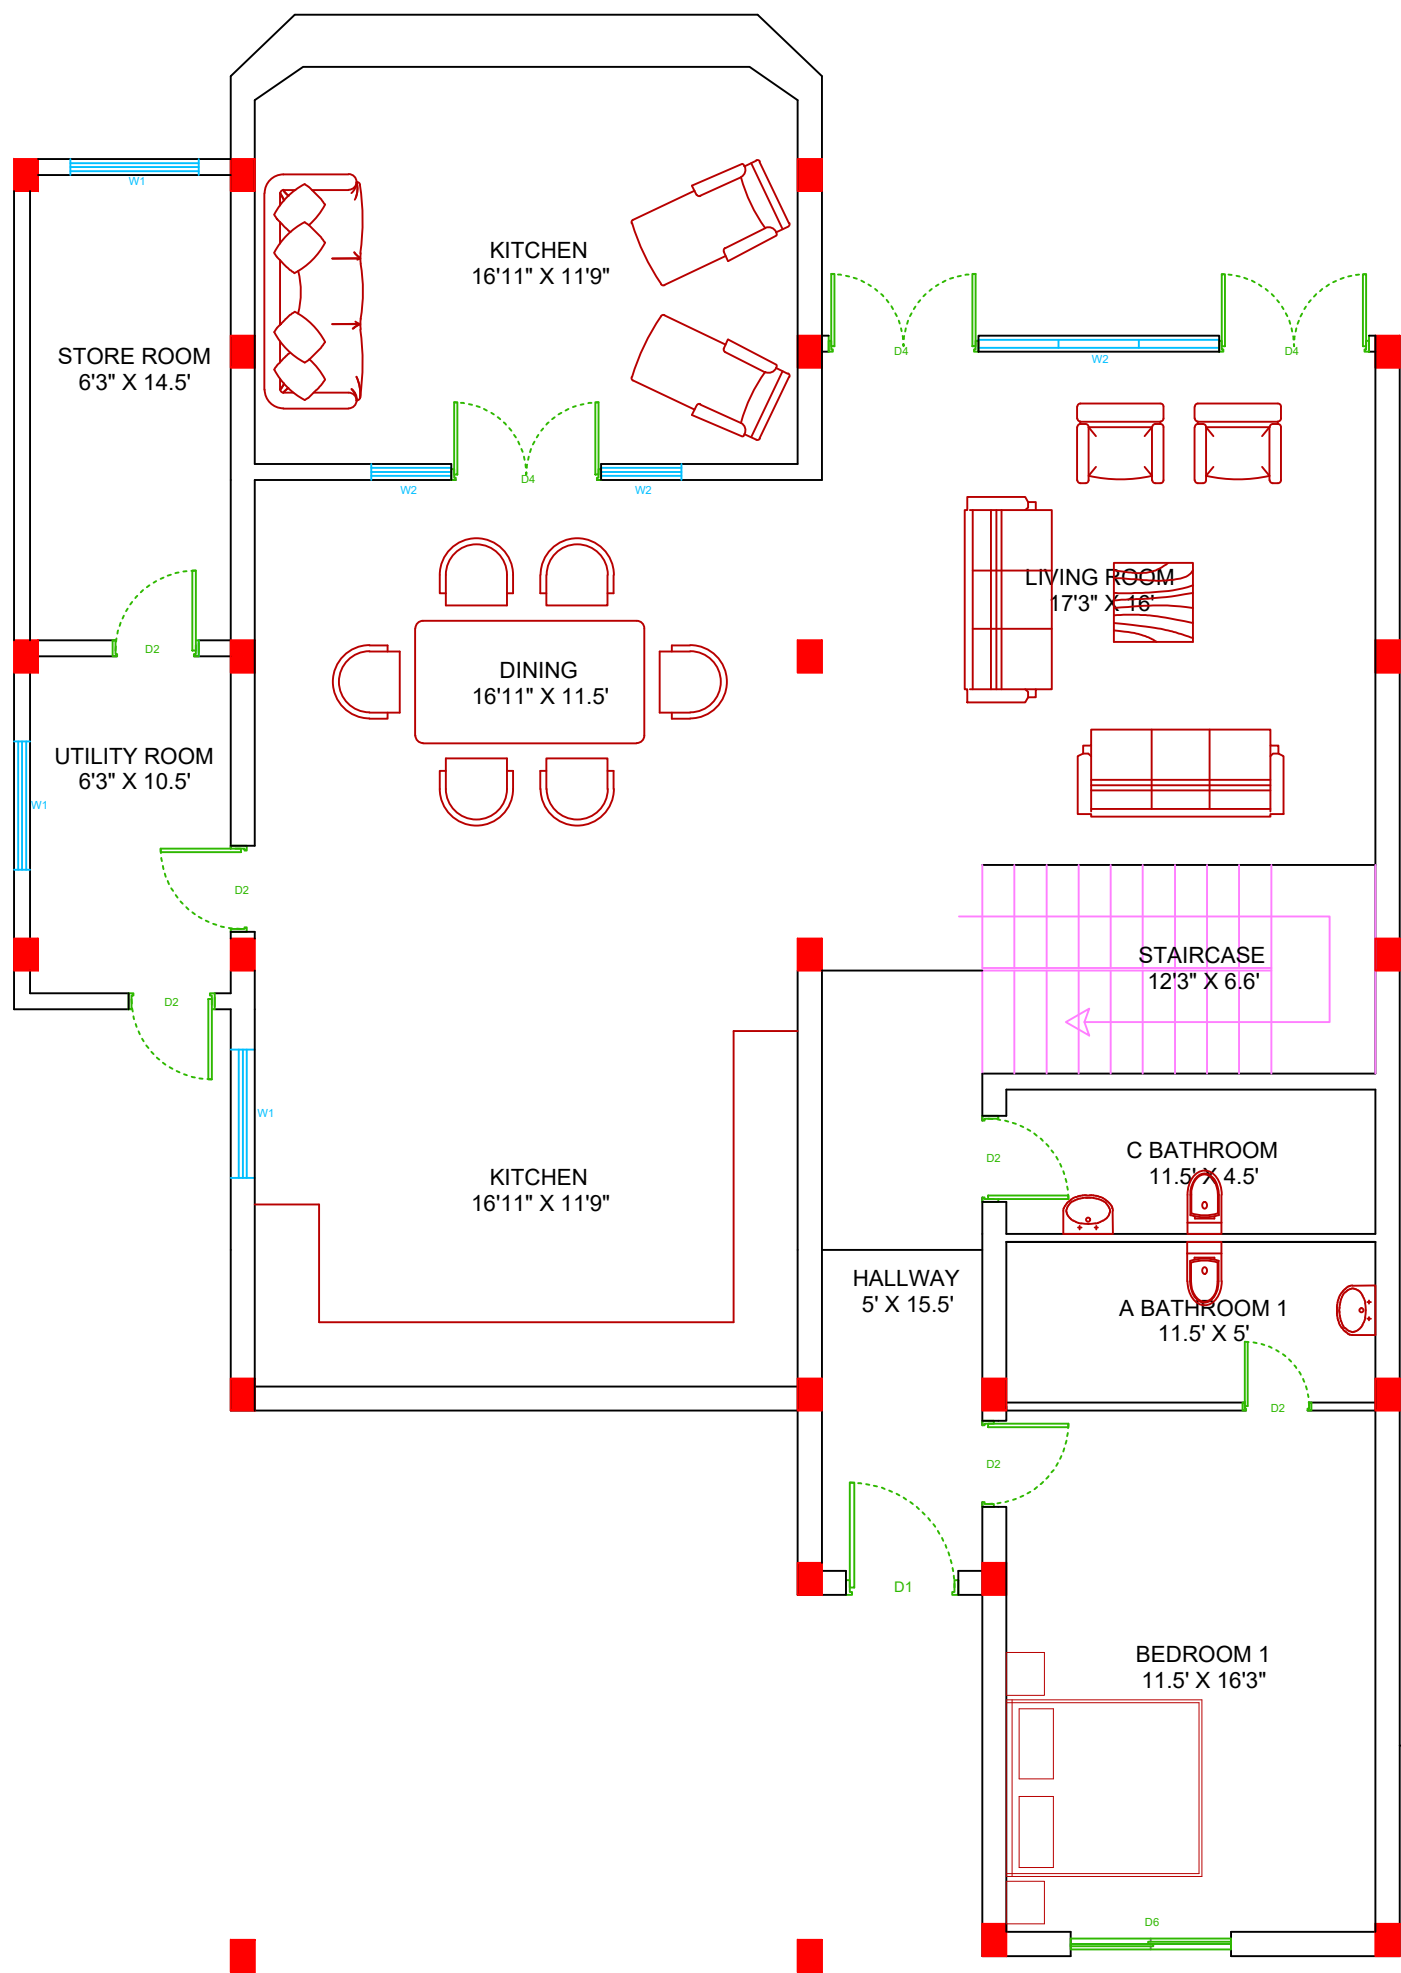


AREA: 1500 Sq ft

FIRST FLOOR FURNITURE PLAN

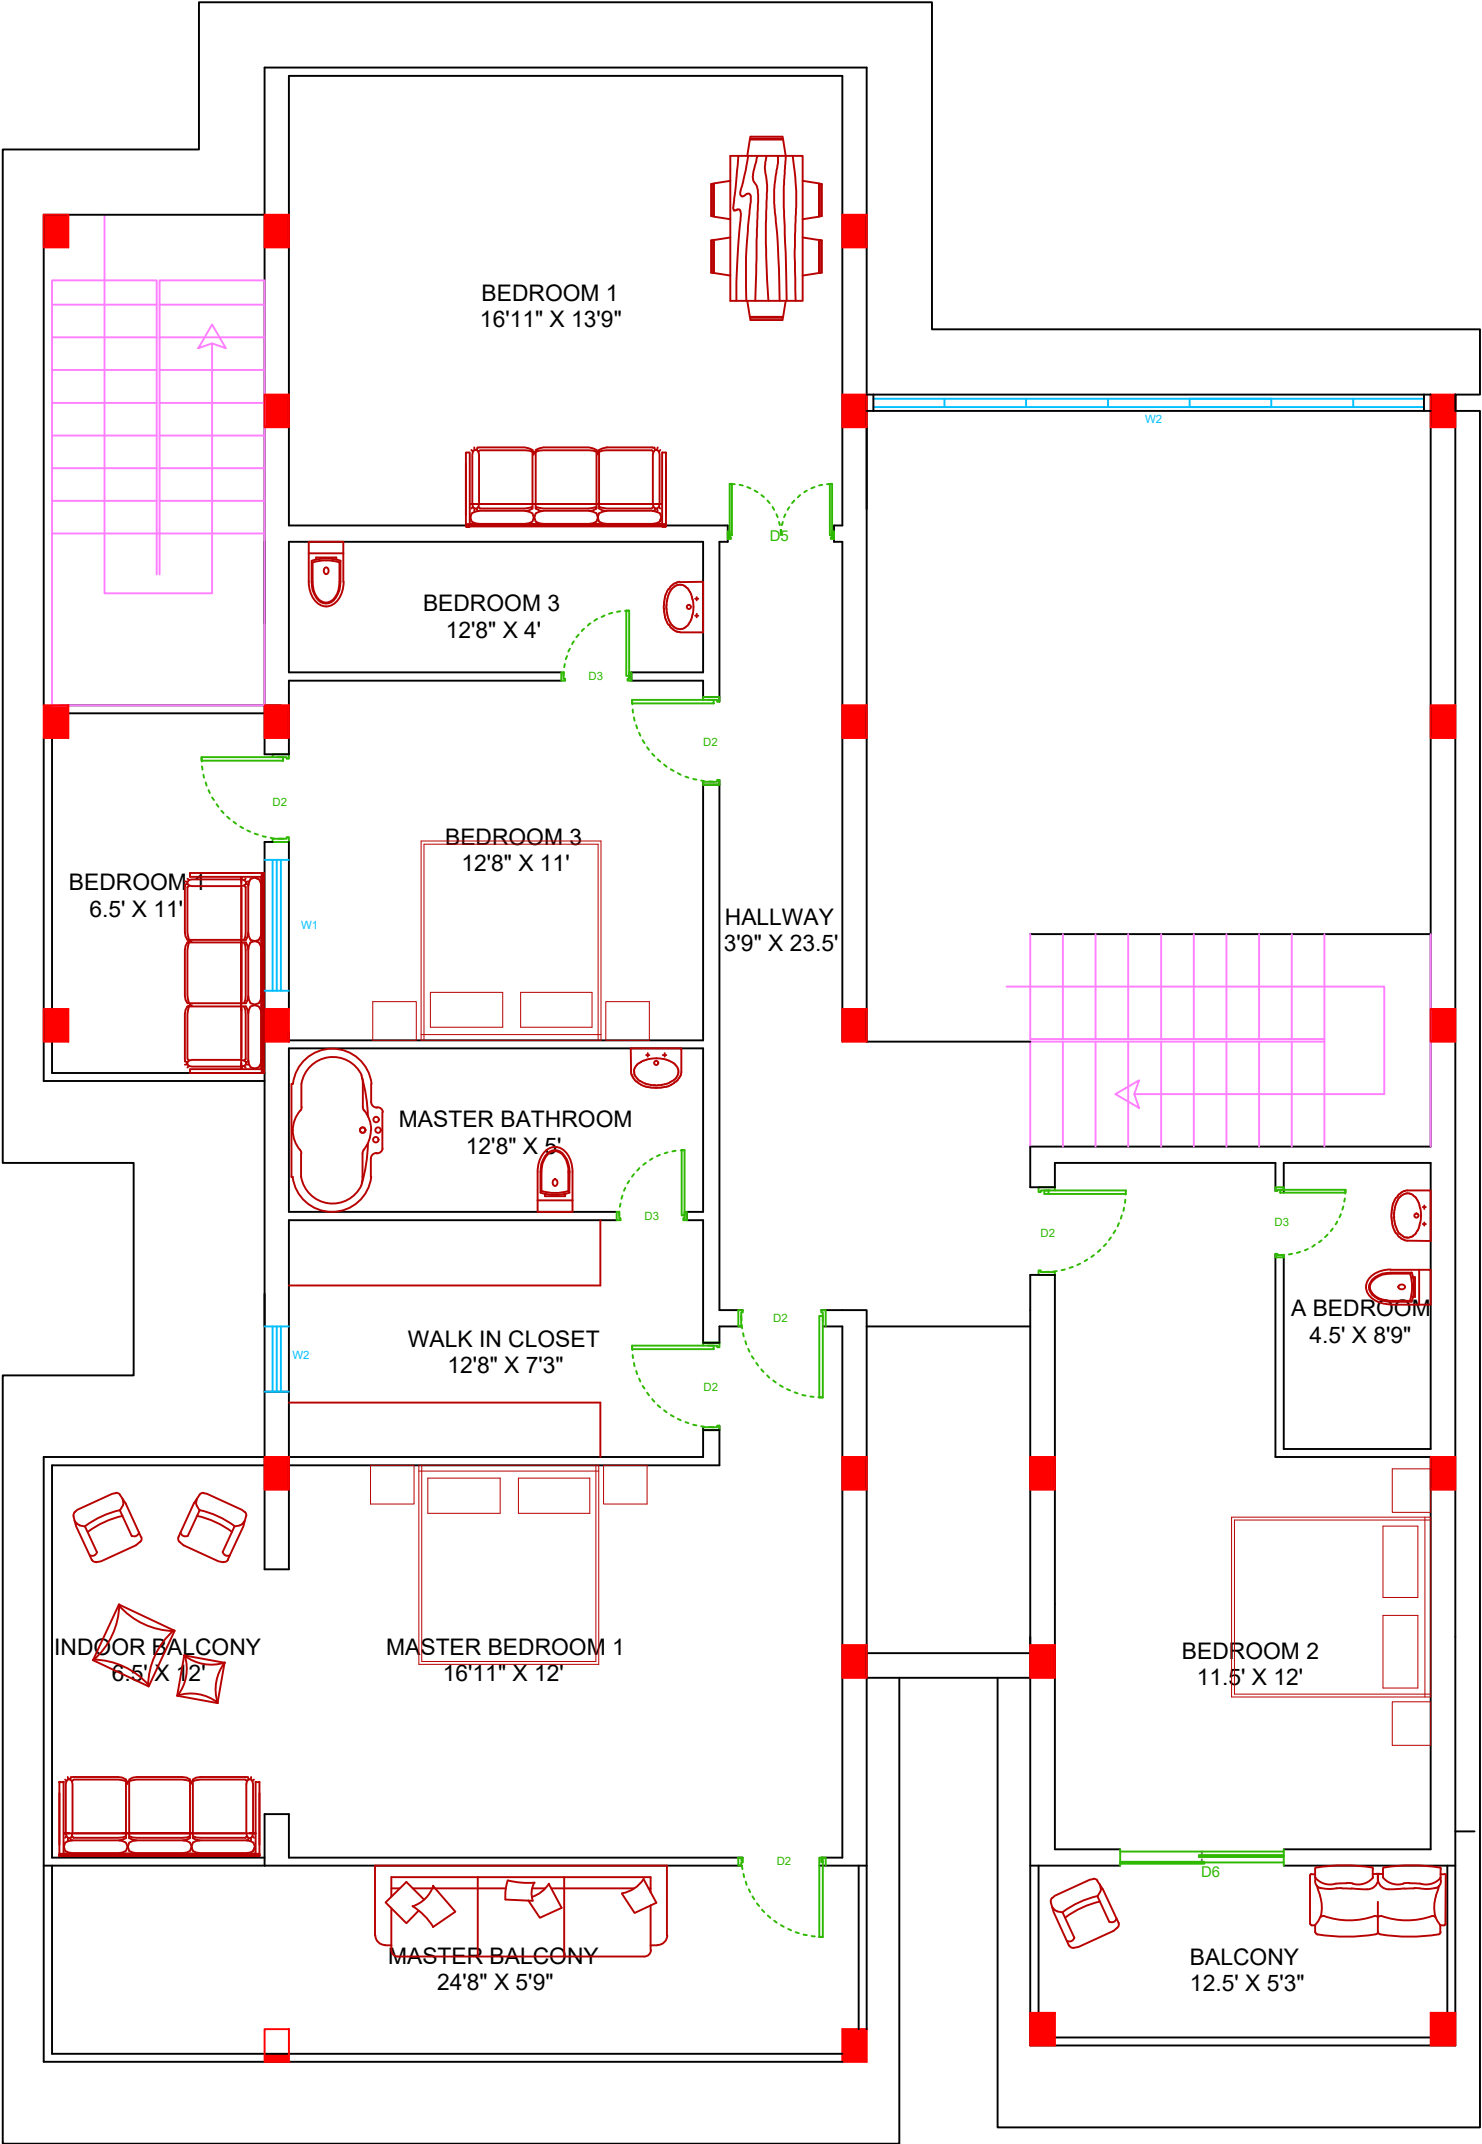


AREA: 1500 Sq ft

ELECTRICAL LAYOUT

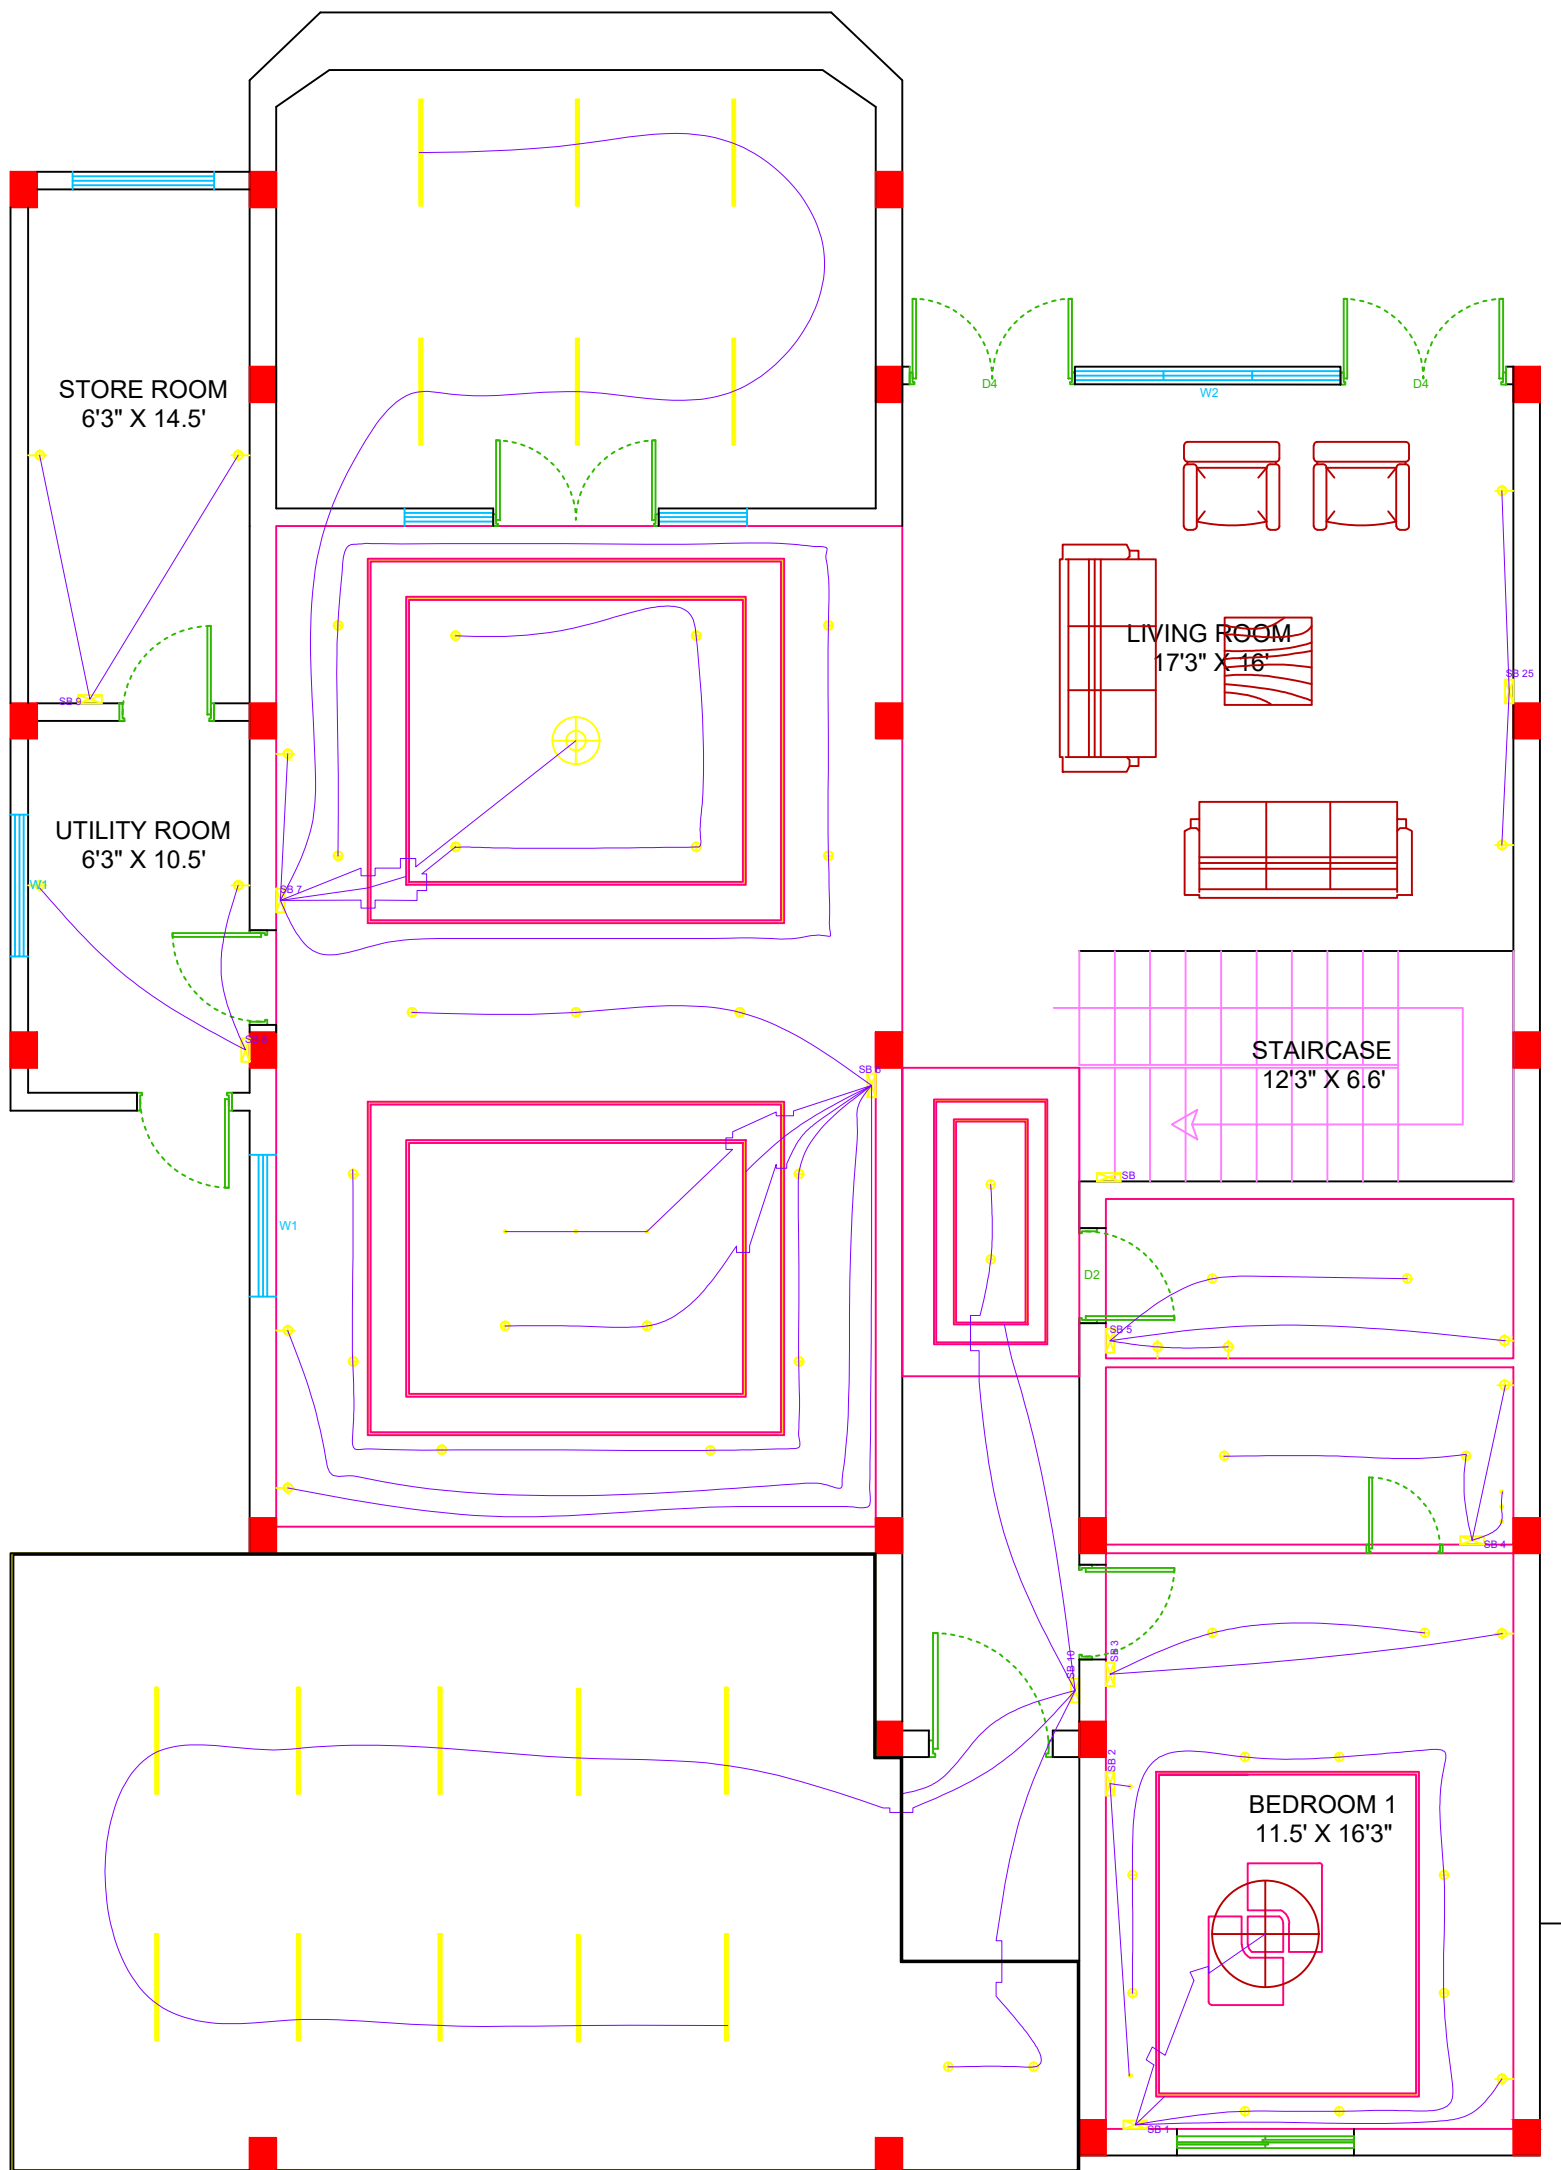


GROUND FLOOR
ELECTRICAL LAYOUT

ELECTRICAL LAYOUT

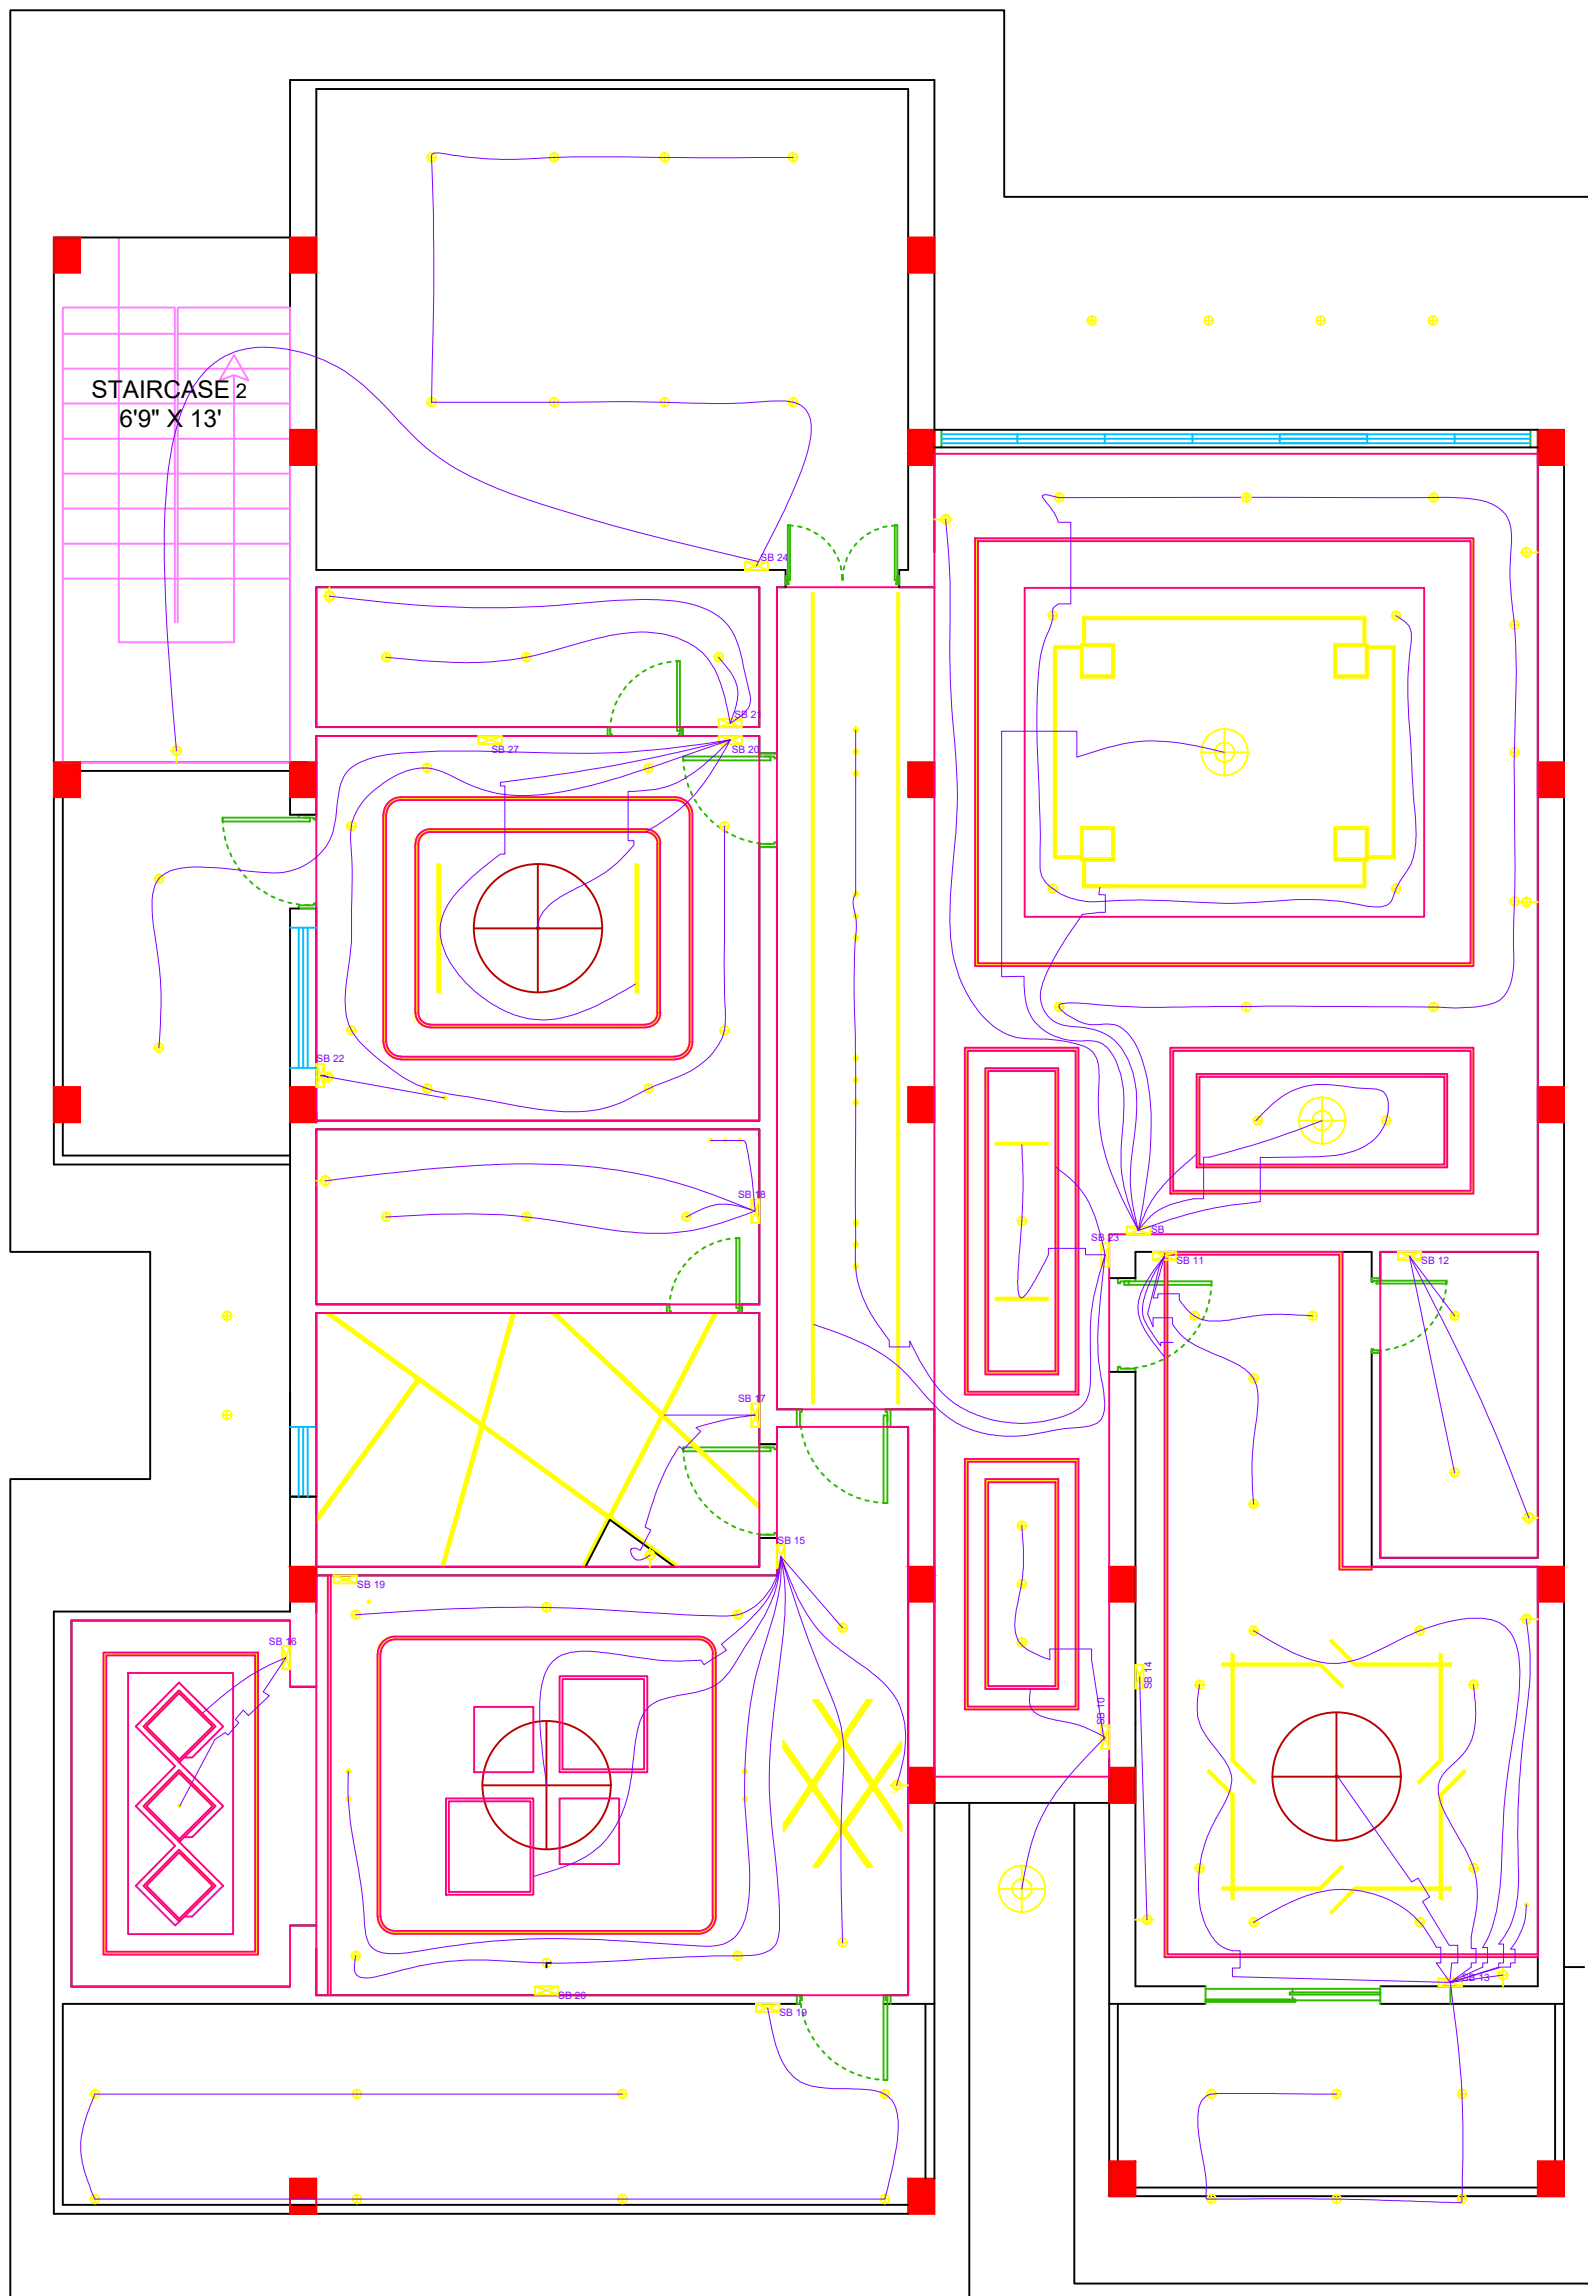


FIRST FLOOR ELECTRICAL LAYOUT

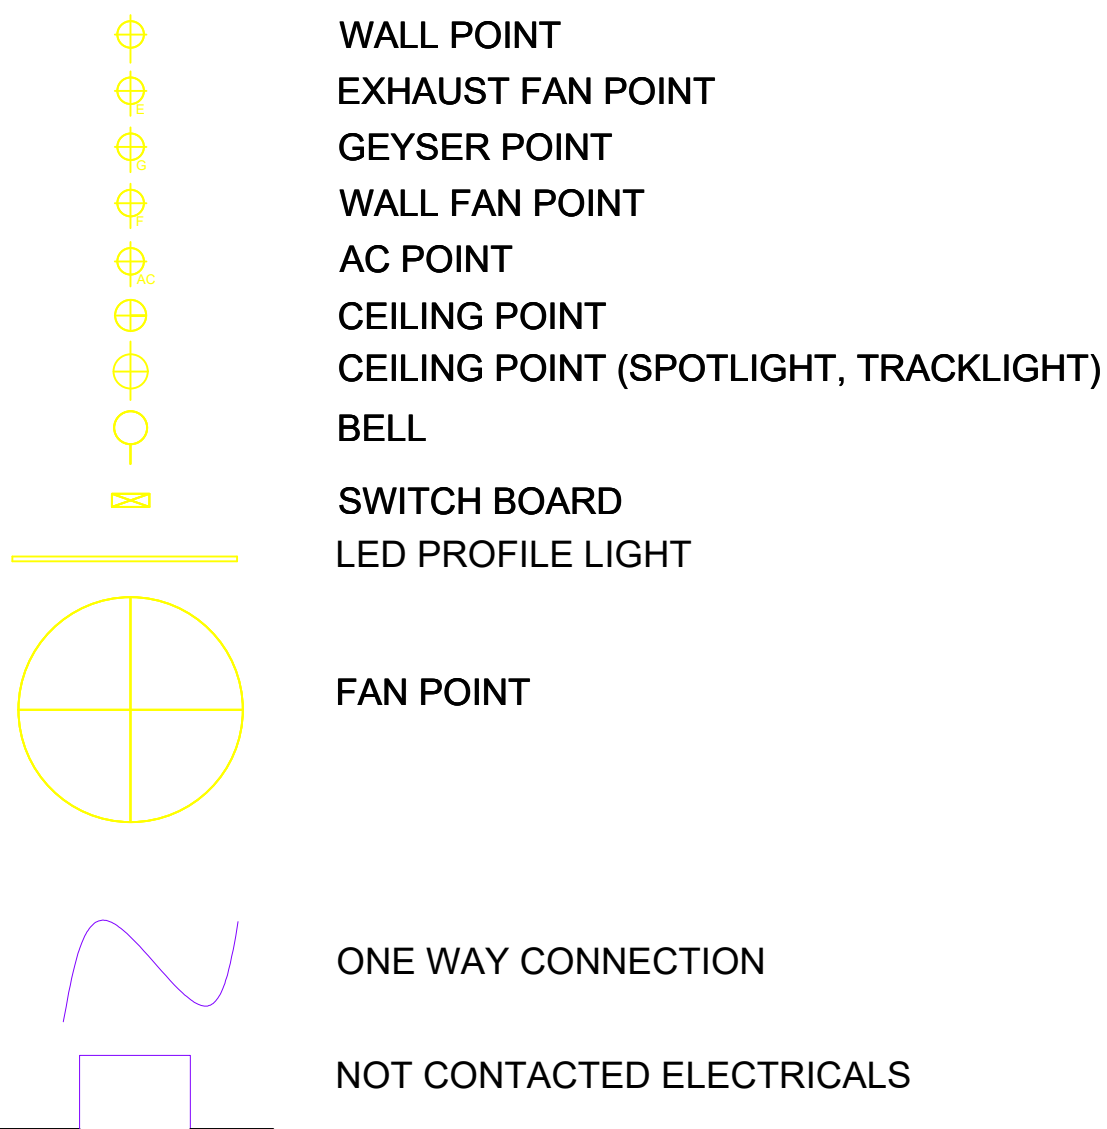


BOARD	HEIGHT	FP	WLP	CLP	WP	5AMP	15AMP	REMARKS
SB	1200	-	-	6	1	1	1	AC
SB-01	1200	1	-	2	1	2	1	AC
SB-02	600	-	-	2	-	2	-	
SB-03	1200	-	1	1	-	-	-	
SB-04	1200	-	-	2	1	1	-	GEYSER
SB-05	1200	-	-	2	1	1	-	GEYSER
SB-06	1200	-	-	5	2	1	1	GEYSER , EXHAUST
SB-07	1200	-	-	4	1	1	1	AC
SB-08	1200	-	2	-	-	-	-	
SB-09	1200	-	2	-	-	-	-	
SB-10	1200	-	-	8	-	-	-	
SB-11	1200	-	-	4	-	-	-	
SB-12	600	-	-	2	1	1	-	GEYSER
SB-13	1200	1	1	5	1	1	1	
SB-14	1200	-	1	-	-	4	-	TELEVISION
SB-15	1200	1	-	6	1	1	1	AC
SB-16	1200	-	-	3	-	1	-	
SB-17	1200	-	1	1	1	1	-	
SB-18	1200	-	-	3	1	1	-	GEYSER
SB-19	1200	-	-	1	-	2	-	
SB-20	1200	1	-	4	-	-	-	
SB-21	1200	-	-	2	1	1	-	
SB-22	600	-	-	1	-	1	1	AC
SB-23	1200	-	-	4	-	-	-	
SB-24	1200	-	1	1	-	2	-	
SB-25	1200	-	2	-	-	4	-	
SB-26	1200	-	-	-	-	4	-	
SB-27	1200	-	-	-	-	4	-	

LIGHTING LAYOUT

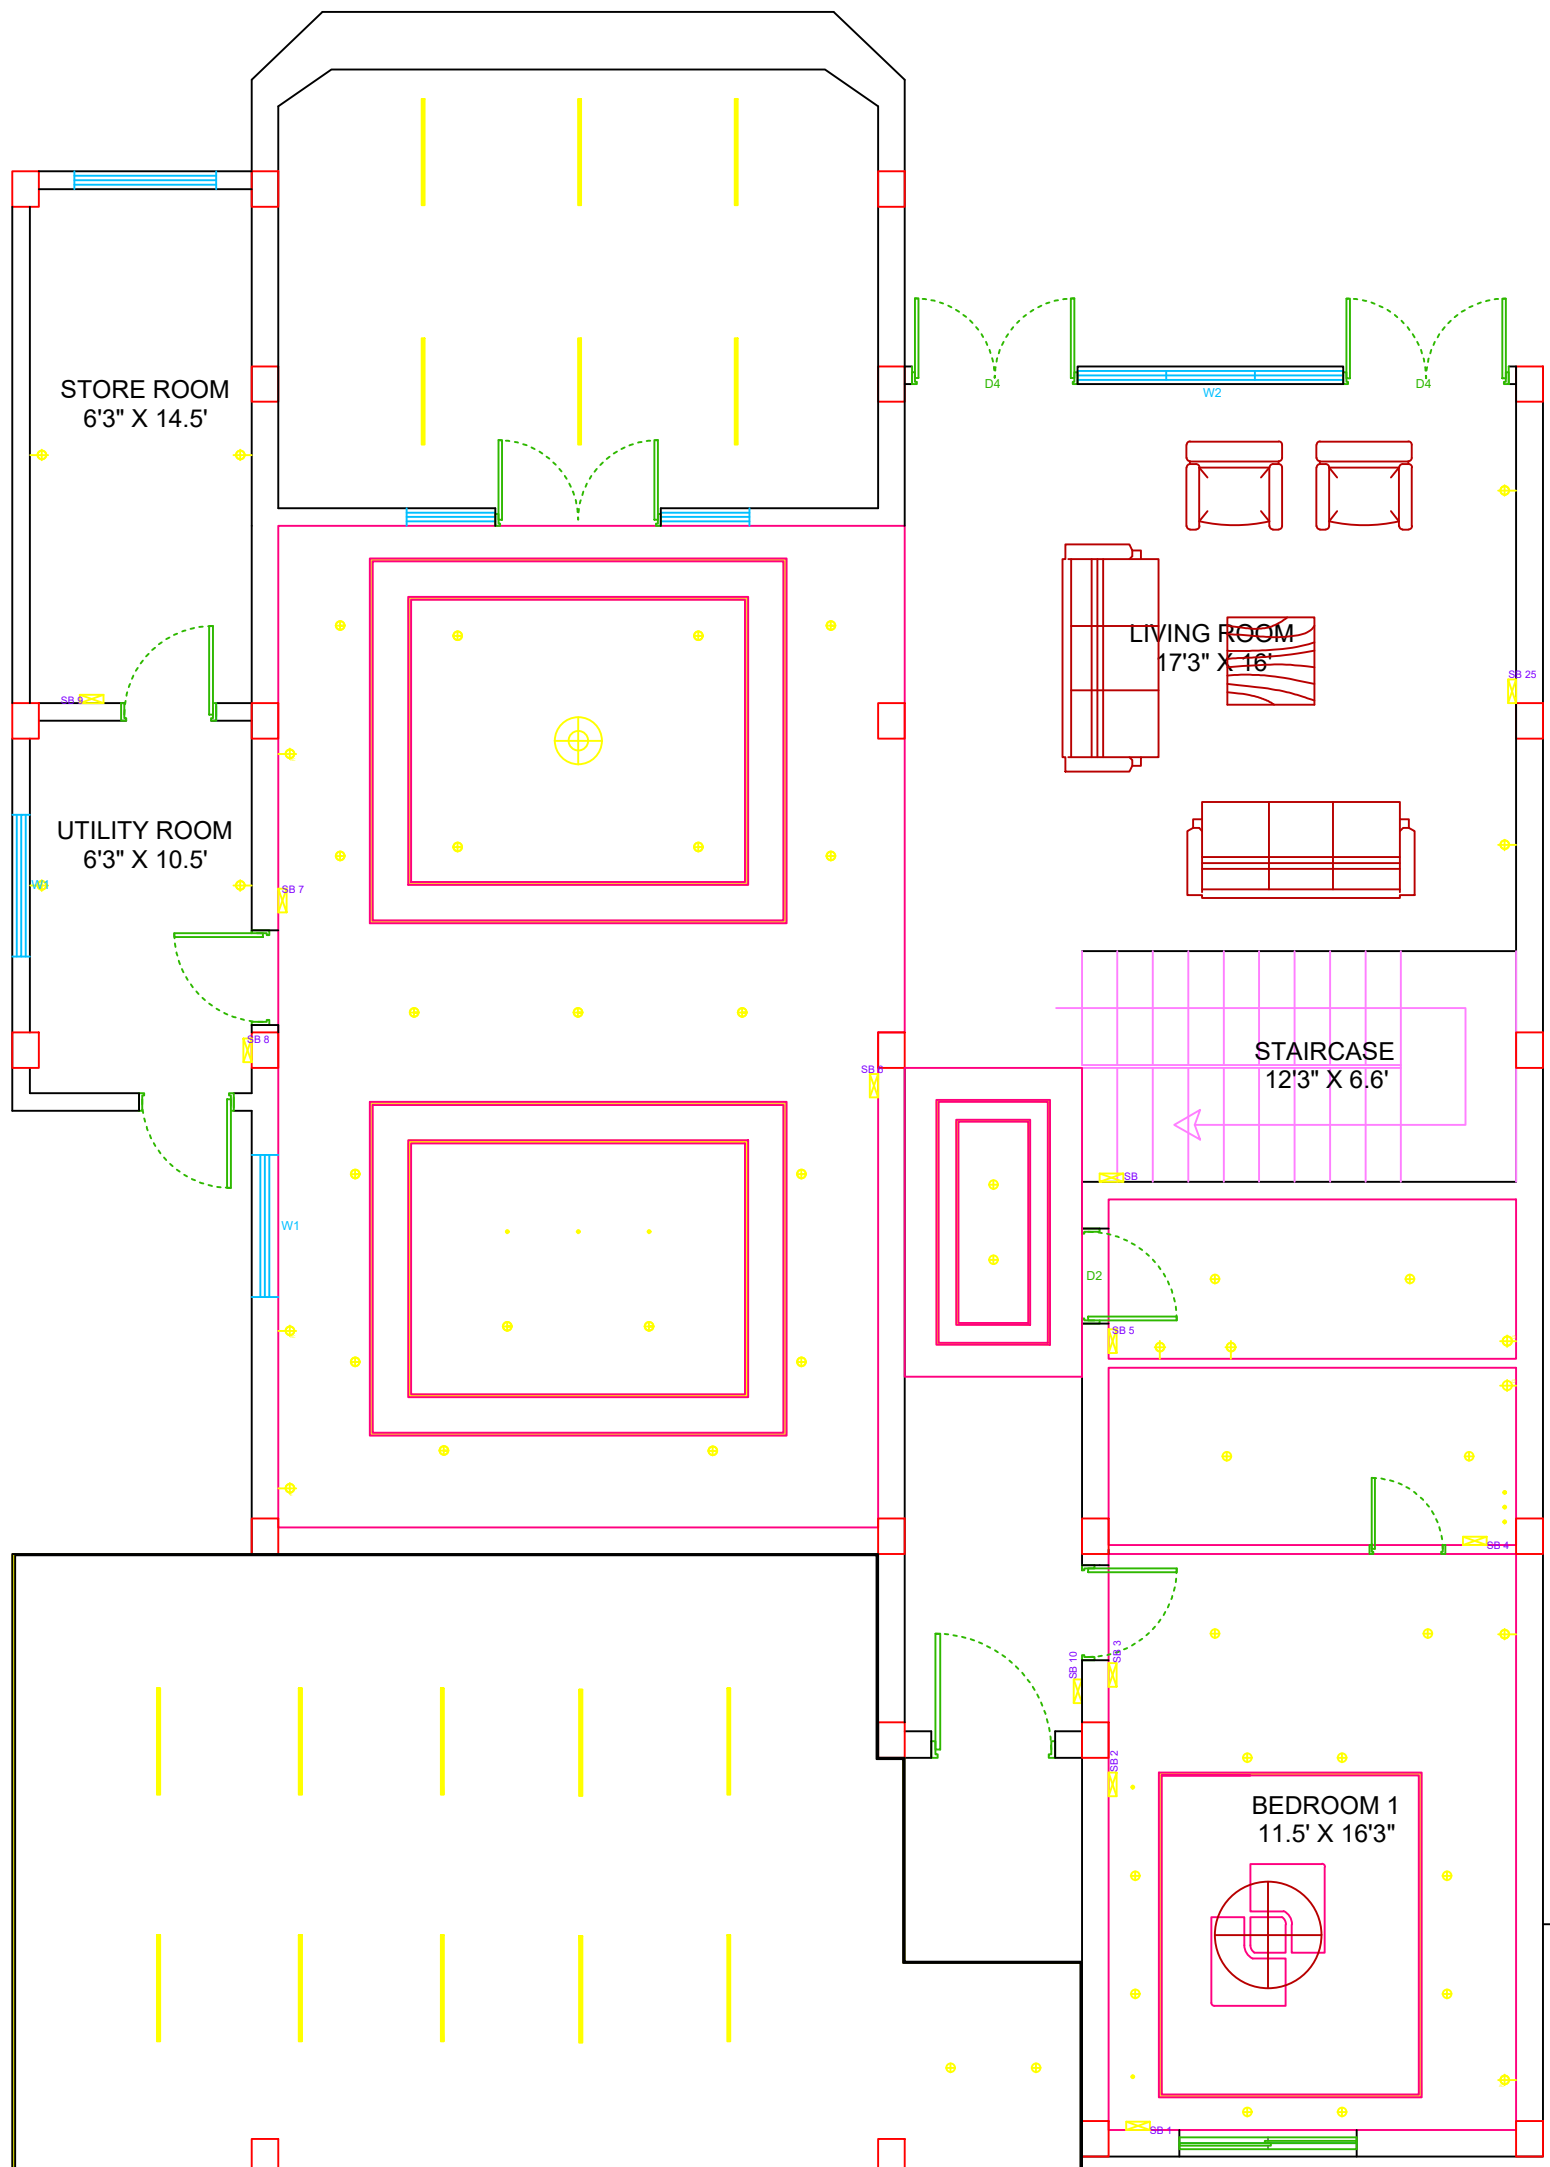


GROUND FLOOR
LIGHTING LAYOUT

FIRST FLOOR LIGHTING LAYOUT

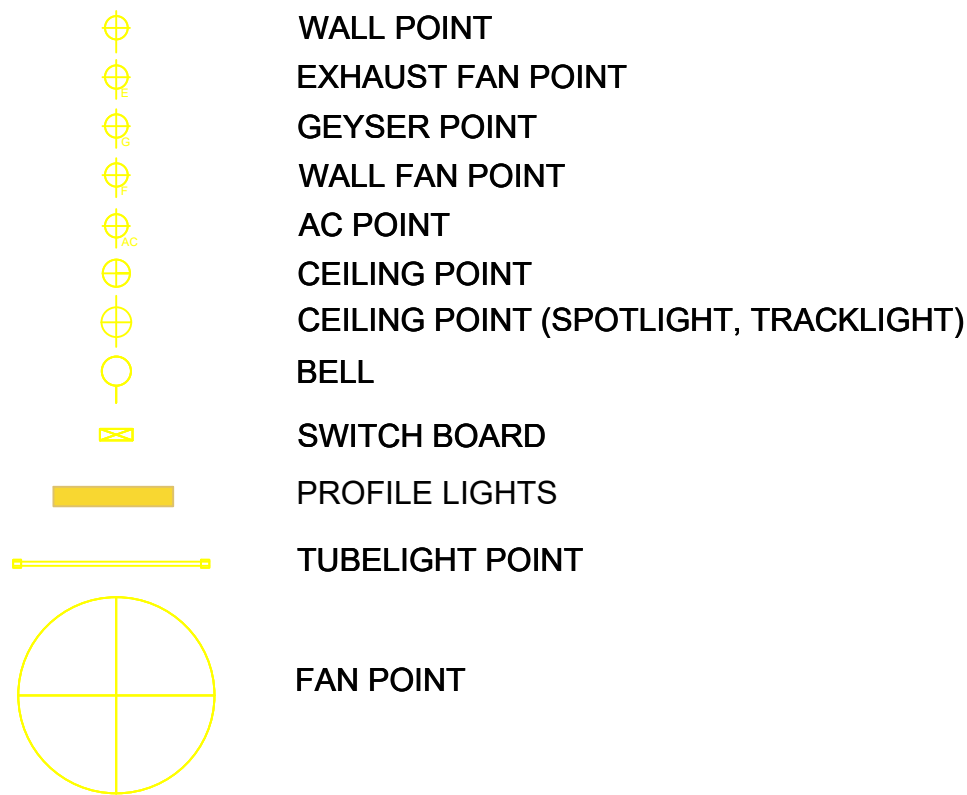


NAME OF THE ROOM	LIGHT NAME	SYMBOLS	WATT	PRICE FOR PIECE	NO. OF PIECE
BED ROOM	PHILIPS STAR FIT LED DOWNLIGHT 2700K		5W	143	60
	PHILIPES LED PROFILE LIGHTS 5 METER		6W	9275	
	BAJAJ FRORE 1200 MM STAR RATED CEILING FAN		52W	1299	4
LIVING ROOM	PHILIPS STAR FIT LED DOWNLIGHT 4500K		5W	143	18
	WHISPERING HOMES SORA ACRYLIC LED WALL LIGHT		7W	2999	2
	PHILIPES LED PROFILE LIGHTS 5 METER		6W	9275	
	LED CHANDELIER 4500K (1)DISCOUNT4 PRODUCT 6 FEET SPIRAL MODERN CRYSTAL LED (2)MODERN CONTEMPORARY SPIRAL LED 3 RING CHANDELIER		(1)42 W (2)30 W	(1) 9900 (2) 2999	(1) 1 (2) 1
KITCHEN	PHILIPS STAR FIT LED DOWNLIGHT 2500K		5W	143	19
	PHILIPS ACESAVER E 27 2500K		5W	80	3
DINING ROOM	PHILIPS STAR FIT LED DOWNLIGHT 2500K		5W	143	15
	Hdc MODERN LED CREATIVE TREE BRANCH CHANDELIER		30W	3899	1
BATH ROOM	PHILIPS STAR FIT LED DOWNLIGHT 6500K		5W	149	12
HALLWAY	PHILIPS STAR FIT LED DOWNLIGHT 4500K		5W	143	5
	STURLITE EVA 3W LED DOWNLIGHT 4500K		3W	89	12
BALCONY AND BARANDA	PHILIPS STAR FIT LED DOWNLIGHT 6500K		5W	149	28
	PHILIPES LED PROFILE LIGHTS 5 METER		6W	9275	
STORE AND UTILITY ROOM	WIPRO GARNET LED BULB B22 6500K		7W	75	4

FALSE CEILING LAYOUT

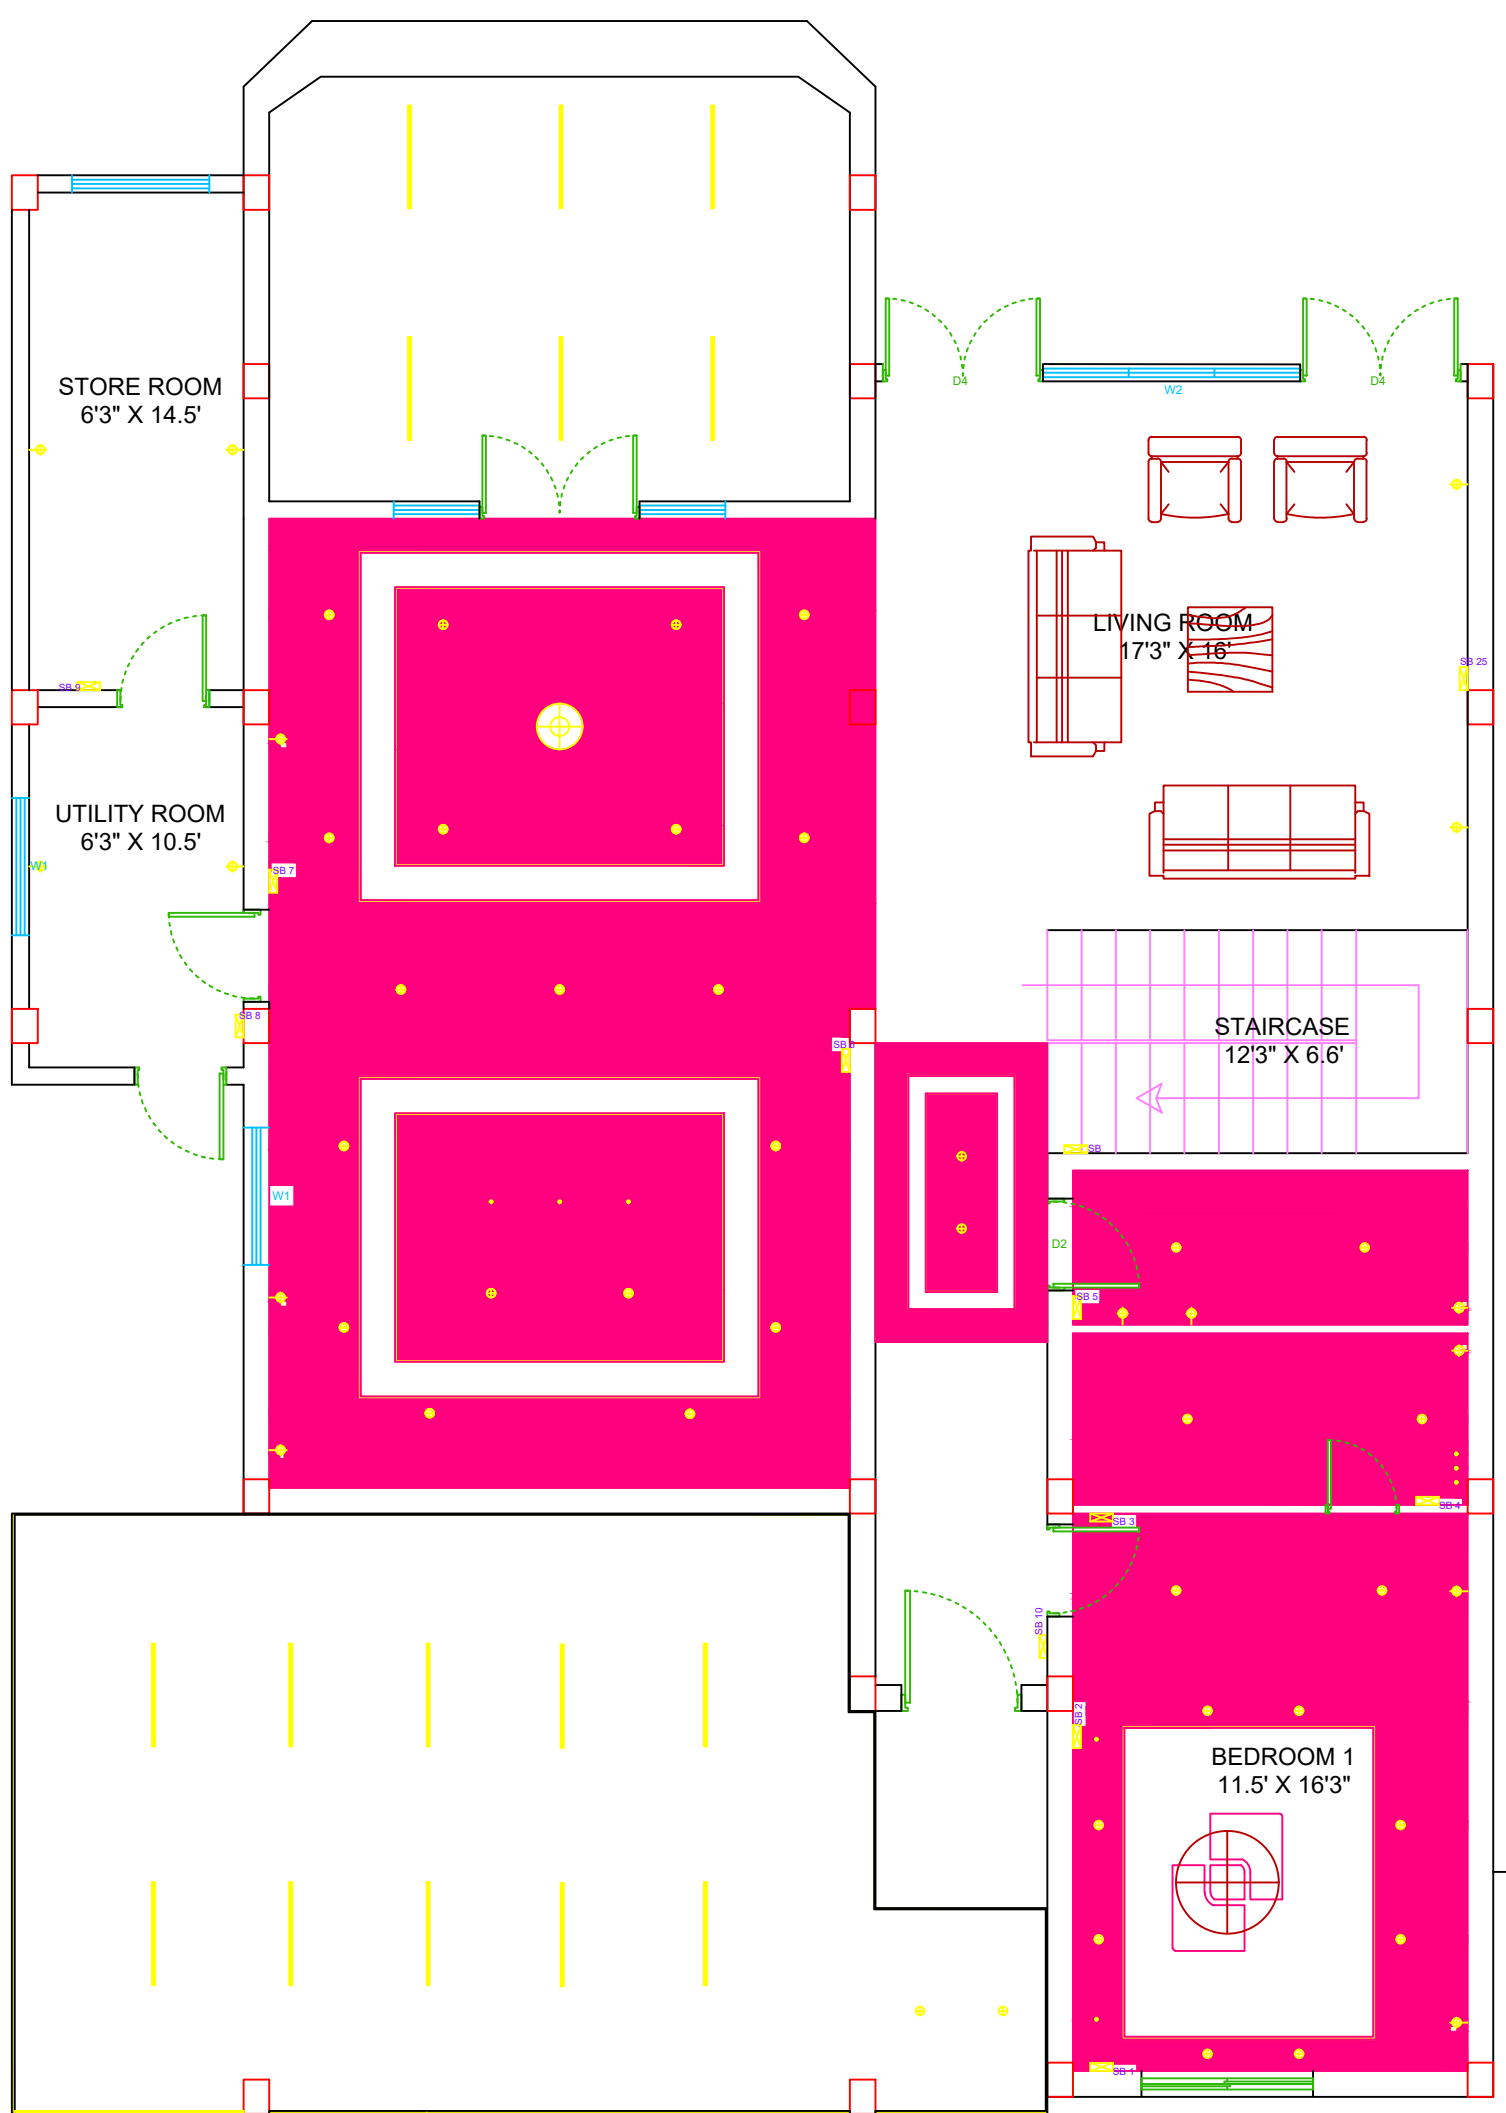


GROUND FLOOR PLAN
FALSE CEILING LAYOUT

FALSE CEILING LAYOUT

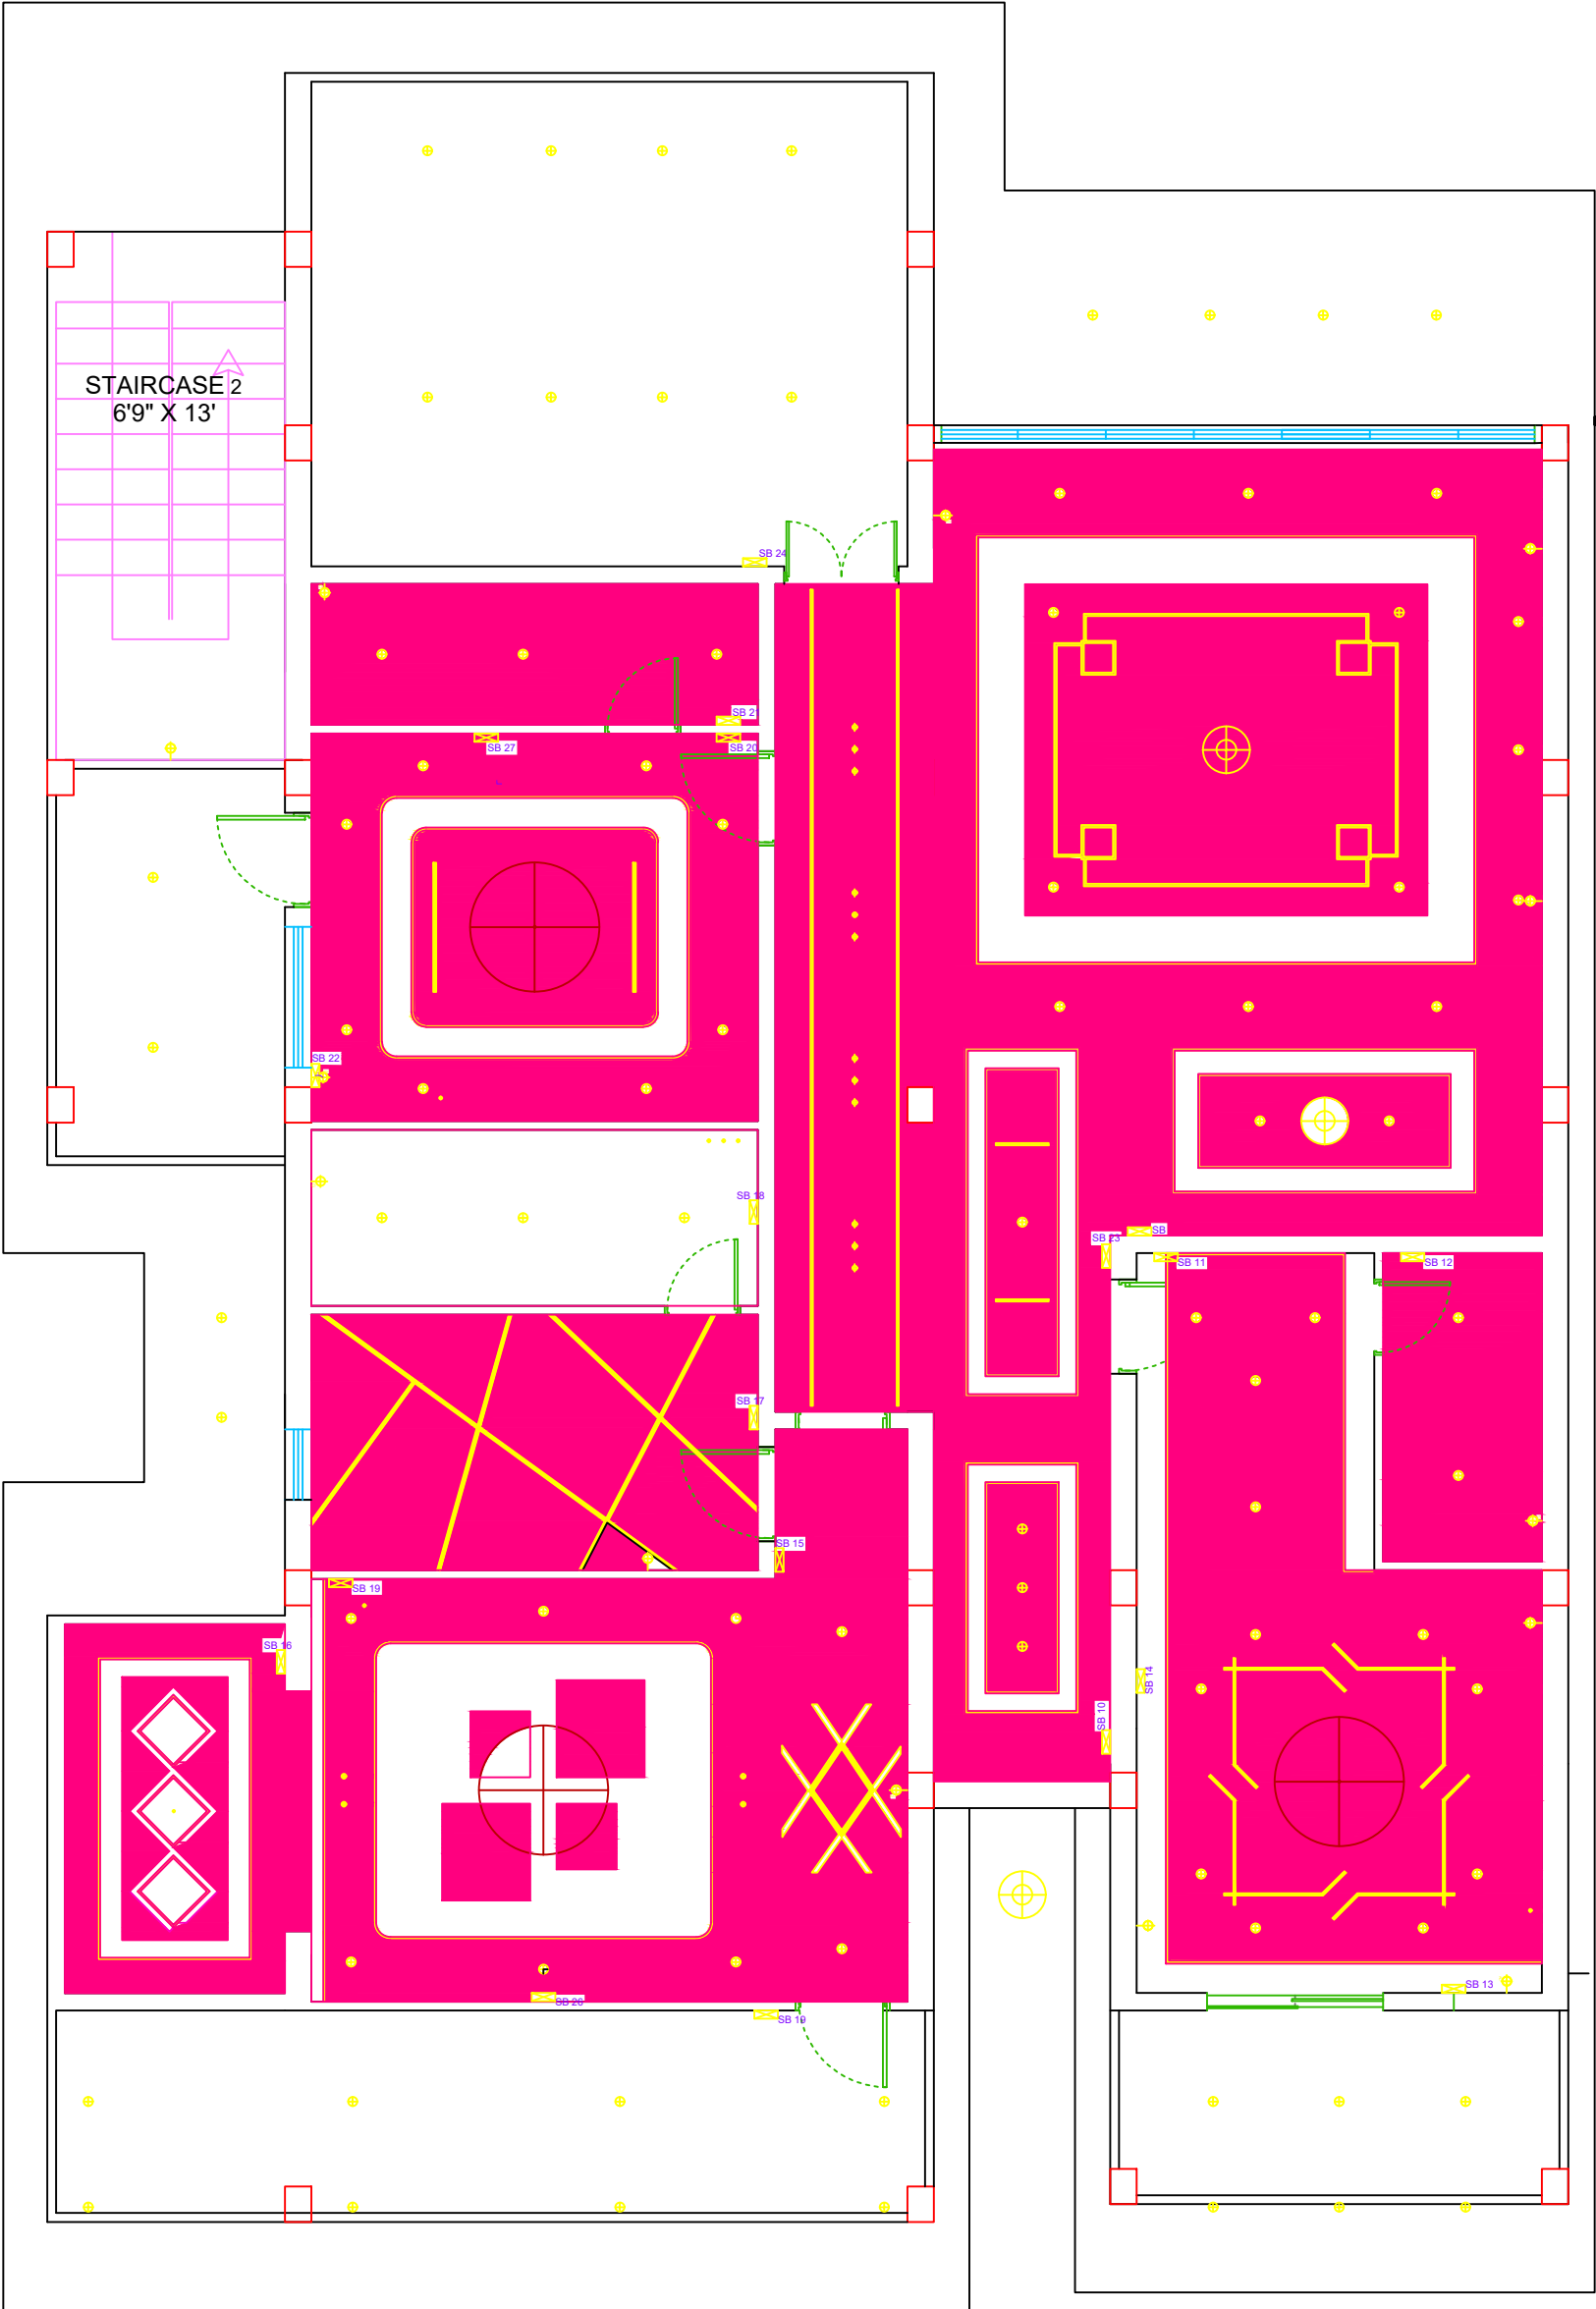

FIRST FLOOR PLAN
FALSE CEILING LAYOUT

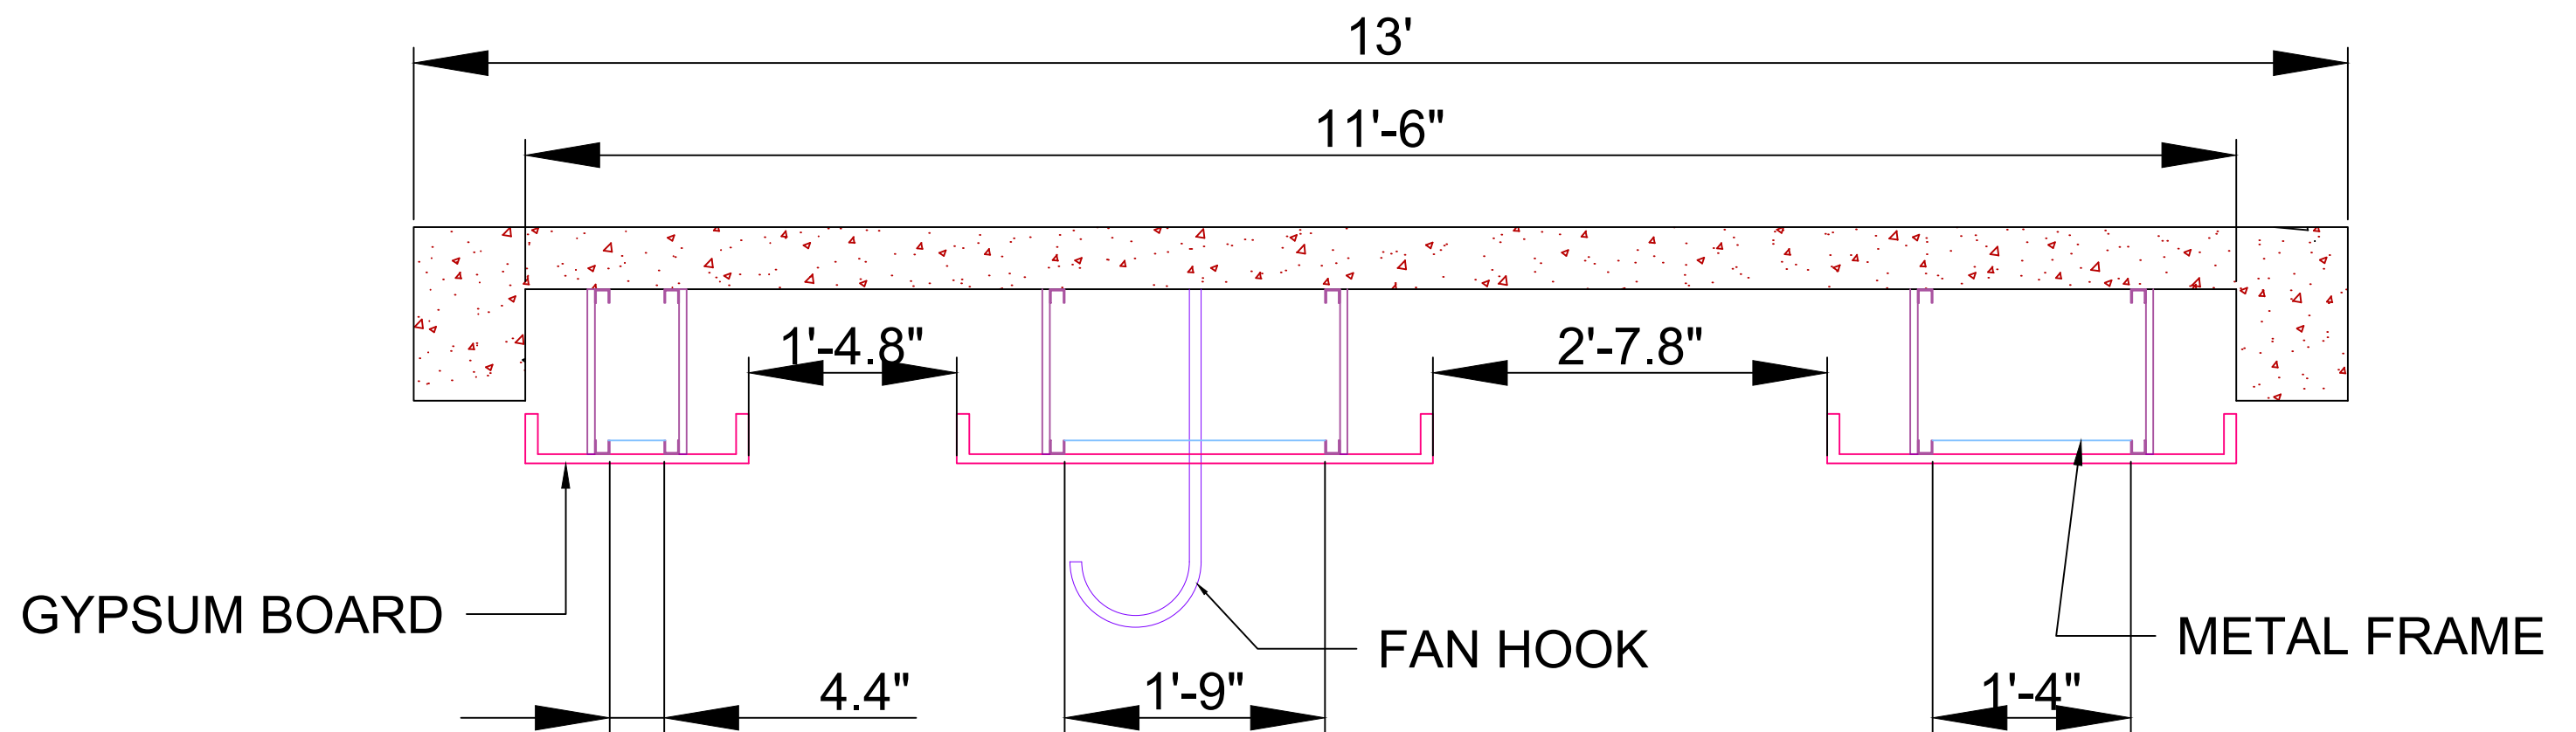

TYPICAL FALSE CEILING
LAYOUT